

the Smart Tilt Control™
the Smart Tilt Control™ Max
Ceramic Heaters

Instruction Book - LCE208 & LCE308



Breville®



Contents

2	Breville Recommends Safety First
8	Components
9	Control Panel
10	Features
11	Assembly
12	Functions
15	Wi-Fi Connectivity & Voice Assistants
19	Care, Cleaning & Storage
20	Troubleshooting

BREVILLE RECOMMENDS SAFETY FIRST

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care and adhere to the following precautions.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Carefully read all instructions before operating the ceramic heater for the first time and save for future reference.
- Always ensure the ceramic heater is properly assembled before use. Follow the instructions provide in this instruction book.
- Remove and safely discard any packaging material and promotional labels before using the ceramic heater for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this ceramic heater, where applicable.
- Avoid touching the ceramic heater body while it is operating as some parts of the ceramic heater are hot. When moving the ceramic heater, switch off and let the ceramic heater cool down before attempting to move it.

- When moving the ceramic heater, always carry by the handle. Do not attempt to move the ceramic heater by the power cord.
- Keep combustible materials such as drapes and other furnishings at least 1.7 metres from the front, sides and rear of the ceramic heater.
- Extreme caution and supervision are necessary when this ceramic heater is used by or near children, invalids or animals.
- Children should be supervised to ensure that they do not play with the ceramic heater.
- Do not use this ceramic heater in the immediate surroundings of a bath, a shower or a swimming pool. Do not immerse or allow liquids to be spilt on the ceramic heater.
- Do not drape material over the ceramic heater such as to dry laundry.
- This ceramic heater is not intended for use in wet or moist locations.
- This ceramic heater has hot and arcing or sparking parts inside. Do not use in areas where petrol, paints, aerosols or other flammable substances are used or stored.
- Do not allow materials that have been in contact with oil, petroleum-based products or drying fluids to come in contact with the ceramic heater.
- Do not operate the ceramic heater on an incline plane.
- Only use the ceramic heater on a horizontal and stable surface.
- Do not leave the ceramic heater unattended. Always switch the ceramic heater off on the control panel and the main power switch at the back of the heater, then switch off at the power outlet and remove the plug from the power outlet when not in use.
- Do not operate the ceramic heater with a damaged cord or plug, or if the ceramic heater has been dropped or damaged in any matter. Return the ceramic heater to your nearest Breville service centre for examination, electrical or mechanical adjustment or repair.

- Do not operate the ceramic heater with the power cord damaged, frayed or split, wound around any part of the ceramic heater, or in contact with heated surfaces of the heater.
- Do not run the cord under carpeting or cover the cord with rugs, runner or the like. Arrange the cord away from traffic areas and where it will not be tripped over.
- Do not locate the ceramic heater immediately below a socket outlet when in use.
- To disconnect the ceramic heater, switch the power switch to off then switch off at the power outlet and remove the plug from the outlet.
- Do not insert or allow foreign objects to pass through the inlet or outlet openings. This may cause an electric shock, fire or damage the ceramic heater.
- To prevent a possible fire or heat damage, allow ample space around the ceramic heater (at least 1.7 metres at the front, 0.5 metres at the rear, top and sides) and do not totally or partially block the air inlet or outlets in any manner.

Check the openings from time to time for accumulated dust. Ensure long shag carpet does not obstruct airflow under the unit.

- Do not touch hot surfaces or the front grill when in operation or for some time after, as these surfaces may be hot.
- Do not operate the ceramic heater on a sink or drain board.
- To avoid an electrical overload, it is recommended that no other appliances are plugged into the same circuit as your ceramic heater when it is in use.
- Do not move the ceramic heater when it is operating.
- Do not use outdoors. This ceramic heater is not intended for commercial use such as construction sites.
- Use this ceramic heater only as described in this instruction manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury and void all warranties.

- Regularly inspect the power cord, plug, control settings, air inlets and outlets and main housing for any damage. If found damaged in any way, immediately cease use of the ceramic heater and return to Breville or an authorized service agent for inspection or repair.
- To disconnect the ceramic heater, switch the heater to off on the control panel and the main power switch at the back of the heater, then switch off at the power outlet and remove the plug from the power outlet. Allow the ceramic heater to cool down before cleaning and storing.
- Do not unplug the ceramic heater by pulling on the power cord. Always unplug using the power plug.
- Keep the ceramic heater clean. Follow the cleaning instructions provided in this book.
- To prevent a possible fire or heat damage in heating mode, do not operate the unit remotely using the Breville Home Connect™ app when the unit is unattended.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Connect only to a 230V or 240V power outlet.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid or allow
- moisture to come in contact with the part, unless it is recommended in the cleaning instructions.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard, do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorized Breville service centre for examination and / or repair.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. **Misuse may cause injury.**
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- During electrical storms, the appliance should be disconnected from the power source at the wall socket to prevent any electrical surges that may arise during the storm and which may inadvertently cause damage to the appliance and its electronic componentry.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.

- Position the appliance at a minimum distance of 1m away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.




WARNING


Do not use the remote control if the battery compartment does not close securely.

1. Remove the button battery, and keep it away from children.
2. The button battery shall be disposed of properly, including keeping them away from children, and
3. Even used battery may cause injury.

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**

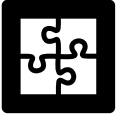

Components

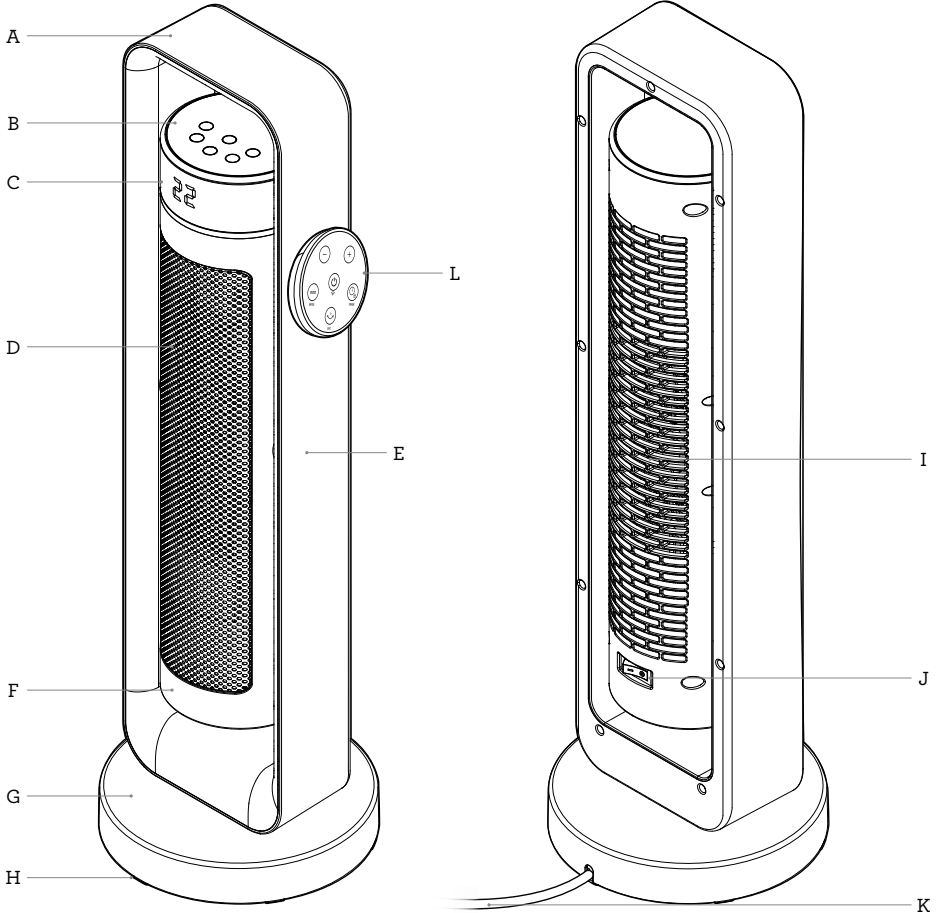 

A. Frame/Handle

B. Control Panel

C. Display Screen

D. Front Grille

E. Tilting Hinge (Manual Tilt)

F. Heater Housing

G. Base

H. Feet

I. Back Fan Grille

 
J. Main Power Switch

K. Power Cord

L. Remote Control with Magnetic Back



Control Panel & Display Screen

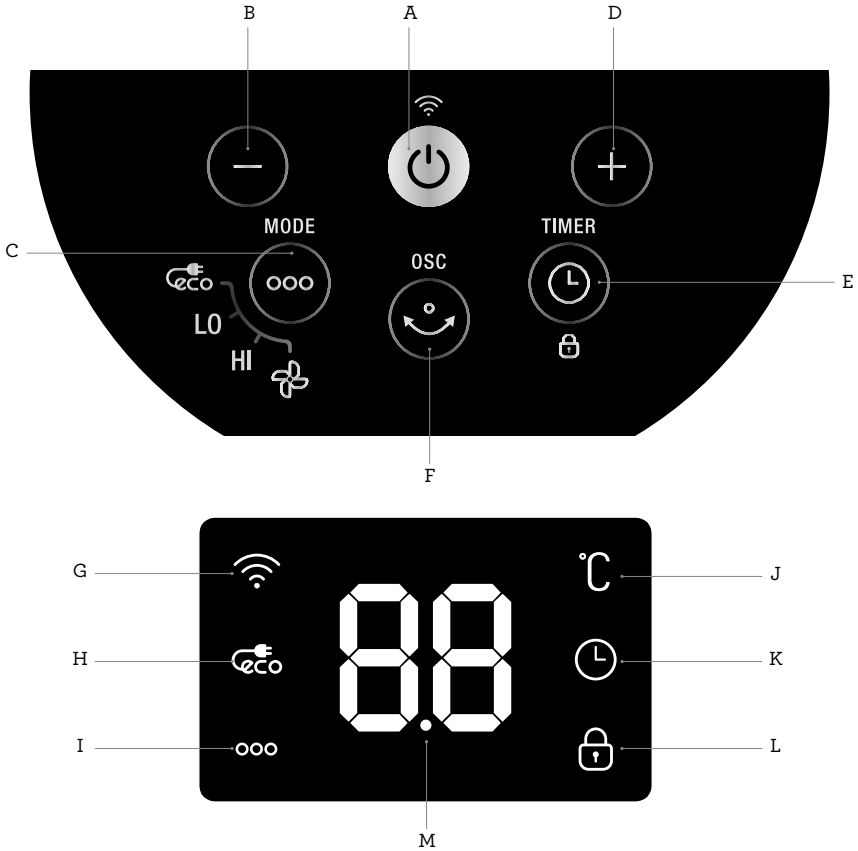

CONTROL PANEL BUTTONS

- A. Power/Wi-Fi
- B. Minus
- C. Mode (Toggle between heat & fan only settings)
- D. Plus
- E. Timer (Up to 12 hours) / Child Lock
- F. Oscillation

DISPLAY SCREEN FUNCTION ICONS

- G. Wi-Fi
- H. Smart Eco Mode
- I. Mode (Illuminates for LOW, HIGH or FAN only setting)
- J. Temperature Degree Celsius
- K. Timer
- L. Child Lock
- M. LED Display



Features

WHAT IS A CERAMIC HEATER?

Ceramic heaters are fitted with ceramic plates which are attached to metal coils. Electricity passes through the coils, heating the ceramic plates, and as the ceramic continues to absorb the heat, it then releases into the air.

The main advantage of using ceramic heating technology is that it warms instantly, heating quickly. The fan also acts as a distributor for the heat, allowing for more even distribution.

SAFETY FEATURES

ThermoSecure™ Protection

Your Breville ceramic heater is fitted with a safety device that automatically switches off the ceramic heater in the event of overheating. Should this ceramic heater stop working, turn off the ceramic heater and inspect the front grille and back fan grille for blockages. Wait until the ceramic heater is fully cooled for the protection system to reset before attempting to restart the ceramic heater. If the ceramic heater fails to operate or the safety device switches off again, take the ceramic heater to an authorised Breville Service Centre for examination or repair.

SAFETY TIP-OVER CUT-OUT SWITCH

The ceramic heater comes with a safety tip-over switch fitted to the base. If the ceramic heater is accidentally tipped over, it will stop operating. Press the Power/Wi-Fi button once to commence operation.



NOTE

Lifting and moving the ceramic heater will activate the tip-over switch, disrupting the power to the heater.



Assembly

BEFORE FIRST USE


Before using your Breville ceramic heater for the first time, remove all packaging material and promotional labels.



WARNING

To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1m from the air outlet.


ASSEMBLING YOUR BREVILLE CERAMIC HEATER

1. Place the ceramic heater on a flat surface.
2. Insert the power plug into a 230V or 240V power outlet and switch the outlet on.
3. Switch on the main power switch located on the back of the ceramic heater. The LED display will illuminate to display the current room temperature. The ceramic heater is now ready on standby.
4. Touch the  button to turn on the ceramic heater. The ceramic heater will automatically start on Smart Eco Mode with a default temperature of 25 degrees Celsius when first turned on. The ceramic heater will operate on Smart Eco mode only when the ambient room temperature falls below 25 degrees.



IMPORTANT

When moving the ceramic heater, always lift the unit using two hands and set down gently on a flat and level surface.

5. To return to standby at any time during operation, touch the  button. A countdown timer will begin, and 45 seconds will display on the display screen. Once the display screen displays '0' the ceramic heater is on standby.



NOTE

The LED display will dim to a comfortable level after 15 seconds if no buttons on the control panel are touched. For ease in programming, the display will return to full illumination when any operating button on the control panel is touched.

ROOM AMBIENT TEMPERATURE

Your Breville ceramic heater is fitted with a temperature sensor that detects the room temperature, which will be indicated on the LED display. The number displayed is only an indication of the room temperature and will vary depending on the location of the ceramic heater in the room. The LED display screen will toggle between the ambient temperature and the mode selected.

MEMORY

The ceramic heater has a memory function and will return to the last setting programmed before it was turned off, except the timer function. The timer resets to 0 hour setting. This will only occur if the ceramic heater is not unplugged and/or switched off at the power point.

The memory function is available on all modes.



WARNING

Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.



Functions


 
MODE

This Breville ceramic heater has 4 operating modes: SMART ECO, LOW HEAT (LO), HIGH HEAT (HI) & FAN ONLY (FA).



NOTE

The ceramic heater will default to Smart Eco Mode when first used, thereafter starting in the last chosen mode before it was turned off.

Press  to choose a heat setting between Smart Eco, Low (LO on display screen), High (HI on the display screen) and Fan only (FA on the display screen) The  icon will illuminate on any mode.




WARNING


To avoid overheating, do not cover the heater.

SMART ECO MODE

Smart Eco Mode automatically adjusts the operating mode based on the room temperature to operate both for efficiency and comfort. Smart Eco Mode is the default operating mode when the ceramic heater is first used.

- When on Smart Eco mode the room temperature will display on the display screen, and  will illuminate.
- The default temperature setting is 25 degrees unless manually selected.

 
 
HEAT MODES LO & HI

- Press  to choose a heat setting between Low (LO on display screen), and High (HI on the display screen).
- During operation the built-in thermostat will turn the ceramic heater off and on at the chosen heat setting to maintain the programmed room temperature.

FAN MODE

- When on FAN mode 'FA' will display on the display screen.
- The fan helps to circulate the air without heating.

SET TEMPERATURE

- The temperature on this ceramic heater can be manually set between 5 - 35 degrees Celsius on any mode except FAN.
- Select the operating mode, then press the  &  buttons to toggle between 5 - 35 degrees in 1 degree increments to the desired temperature.
- The set temperature will flash, then remain solid on the display screen. The display screen will toggle between the set temperature and the current ambient temperature while in operation.


 

 
 
 


NOTE

Select the High heat setting to quickly heat the room to the desired temperature setting.

TIMER

The ceramic heater comes with a 12 hour auto-off TIMER that can be set in 1 hour intervals and switches the ceramic heater off and returns to standby after the set number of hours have elapsed. The TIMER can be set when using any operating mode.

- To set the timer, touch the  &  button until the desired number of hours is displayed on the LED display and the  symbol illuminates.
- The ceramic heater will operate on the selected mode and automatically turn off once the time has elapsed.
- The LED display will indicate the operating mode selected once the timer begins. To check the remaining time on the LED display, touch the TIMER button once.
- To cancel the TIMER any time, touch the  &  button until 'OH' is displayed on the LED display screen until the  symbol no longer illuminates.





NOTE

- To run the ceramic heater continuously, do not set the timer or set the timer to 'OH'.
- All operating modes can be adjusted at any time after the timer is set.
- The ceramic heater will automatically stop operation and switch to standby once the set time has elapsed.


CHILD LOCK


When the Child Lock is engaged, the buttons on the control panel are locked from use.

1. To turn on Child Lock, touch and hold the  button until a beep sounds and the  illuminates on the LED display panel.
2. To cancel, repeat step 1 until the child lock icon no longer illuminates on the LED display panel.

OSCILLATION

The ceramic heater can oscillate automatically left and right to 40 degrees. Oscillation can be set on any operating MODE.

To activate oscillation, touch the  button once. The ceramic heater will move left and right continuously.

To set the orientation of your ceramic heater, touch the  button again. The ceramic heater will stop oscillating and stay at your chosen position.

TILT

The Breville ceramic heaters come with tilting hinges that allow you to manually tilt the housing up to 30 degrees for better heat flow directional control. Simply tilt the heater housing to the angle preferred.


REMOTE CONTROL

The ceramic heater come with a remote control. This remote control features the same controls as on the control panel and can be used the same way.

To avoid misplacing your remote control, the magnetic back allows you to conveniently attach to the right-hand side of the ceramic heater frame as indicated (Fig 1).


The remote control includes 1 x CR2032 3V Lithium battery. This Lithium battery is protected by an isolating slip. Before first using the remote control, remove the battery isolating slip by pulling the slip outwards away from the remote control.

 Fig.1

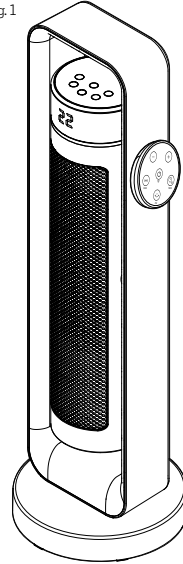


To check and/or to replace the battery, open up the battery compartment at the back of the remote by forming a good grip of the remote, pushing the small arched groove to the right and simultaneously pushing out the battery compartment cover by pushing the rectangular groove outwards. Insert the battery paying attention to the polarity (+ and -) (Fig 2).

 Fig.2

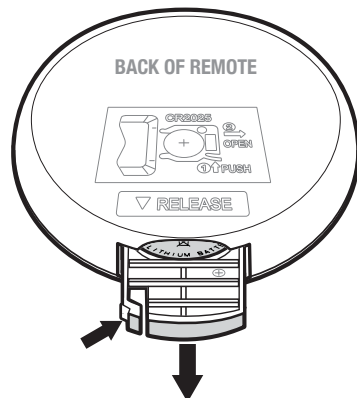

Reinsert the battery compartment into the remote control ensuring that the + symbol is facing upwards when inserted. Make sure the battery compartment is correctly secured (Fig 3).

 Fig.3

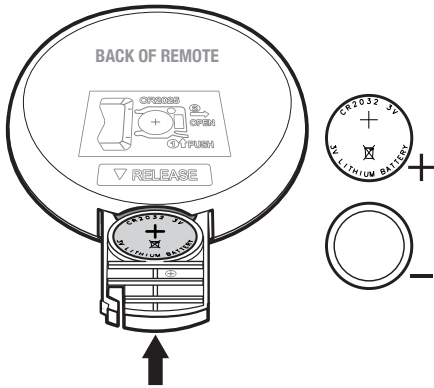

 **NOTE**

To use the remote control, it must be pointed at the control panel and must be used within five metres of the unit.

 **WARNING**

KEEP BATTERIES OUT OF REACH OF CHILDREN

Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the oesophagus. If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 11 26 for fast, expert advice. Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure. Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous. Tell others about the risk associated with button batteries and how to keep their children safe.



Wi-Fi Connectivity



WARNING

Remote operation using the Breville Home Connect app is only recommended for any Breville heating appliance when someone is on the premises. For safety reasons, this device requires re-pairing to the app if power is disconnected from the appliance.

This Breville Home connected product can be controlled both through Wi-Fi and Bluetooth. While Wi-Fi allows for connectivity and control remotely, Bluetooth allows for control within range of the product, even without Wi-Fi.

The Breville Smart Tilt Control™ Ceramic Heater can offer remote operation by using a home Wi-Fi connection and the Breville Home Connect™ app downloaded to a compatible mobile phone through the Google Play store or Apple App store.

To go straight to the appropriate app store, scan the QR code below.



For instructions on how to use the app, scan the QR code below, refer to the Quick Start Guide that can be found in the box or go to tinyurl.com/HomeConnectQuickStart.



NOTE

The Breville Home Connect™ app is compatible with mobile phones running Android® 5.0 or later and iOS devices 11 or later.



NOTE

To control the ceramic heater using the app, the ceramic heater must be plugged into an active power outlet.

CONNECT YOUR CERAMIC HEATER TO WI-FI

Choose from the options available to allow for easy pairing and use.

Bluetooth connection has also been activated for this appliance, which will aid in the pairing process, providing a higher success rate when pairing.



WARNING


Ensure your Breville heater has sufficient space around the unit before pairing the heater through the Breville Home Connect™ App. Always ensure the air outlet is free and not blocked before remote controlling the Breville heater.



 
NOTE





If the power supply to the appliance is interrupted, disconnected or the tip-over switch is activated, Wi-Fi pairing will also be disconnected, and re-pairing with the Breville Home Connect™ App is required.

Follow the steps outlined below.

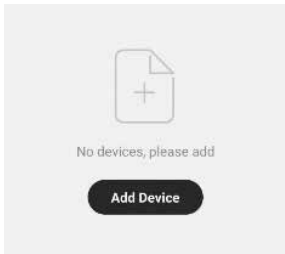
1. Ensure the mobile device is connected to a home Wi-Fi network.
2. The ceramic heater must be on standby. Once on standby, press and hold the Power/Wi-Fi button on the ceramic heater for about 3 seconds until the  symbol flashes. The ceramic heater is now ready to connect.

3. Log into your Breville Home Connect™ app account and stay on the “Home” page. To add the ceramic heater to the list, touch ‘Add Device’ or the symbol found in the top right-hand corner of the screen. Follow the prompts in the app.



4. If the connection is successful, the ceramic heater will appear in the main page of the app and the  symbol on the ceramic heater will illuminate.
5. If connection is unsuccessful, the  light does not illuminate. Press and hold the  button for about 3 seconds until the  light is flashing. Follow the prompts in the app to connect in a different pairing mode.

BLUETOOTH

Bluetooth connectivity is an added feature of the Breville Smart Tilt Control™ Ceramic Heater. When the light above the  is flashing when attempting to connect, the Breville Home Connect™ app should quickly recognise the unit without having to complete extra prompts. Refer to the Quickstart Guide in the box or on Breville.com for specific details on how to connect through Bluetooth.



NOTE

Breville will endeavour to keep the Breville Home Connect app updated as devices and software continue to evolve. However, unknown future updates to technology and software means we cannot guarantee that as models age, their Wi-Fi operation will continue to be supported.



Voice Assistants

The Breville Smart Tilt Control™ Ceramic Heater comes with the added feature of voice assistance, allowing you to control your ceramic heater using your voice by linking your Breville Home Connect™ app with Amazon Alexa and Google Home/Assistant.

To link your Breville Home Connect™ app account with either Google Home/Assistant or Amazon Alexa, refer to the instructions on www.Breville.com or follow instructions found in the Breville Home Connect™ app under **Me > Third-Party Voice Services > View more ways to link**.



IMPORTANT NOTE

The recommended voice commands to operate the appliance's functions differ between Amazon Alexa and Google Home/Assistant as listed. Variations of these commands may also be recognised, however, if a command fails, check against the recommended voice command.



NOTE

To control the ceramic heater using the Amazon Alexa or Google Home/Assistant app, the ceramic heater must be plugged in to an active power outlet and turned on.

VOICE CONTROL WITH AMAZON ALEXA

Before you can voice control your Breville Ceramic Heater with Amazon Alexa, you need to link the Breville Home Connect™ account to the Amazon Alexa app as per the instructions.

Amazon Alexa Recommended Voice Commands for the Breville Smart Tilt Control™ Ceramic Heater

Supported Settings	Amazon Alexa Voice Commands
Power	Turn ON DEVICENAME
	Turn OFF DEVICENAME
Mode	Set DEVICENAME to eco
	Set DEVICENAME to low heat
	Set DEVICENAME to high heat
	Set DEVICENAME to fan
Oscillation	Turn on swing on DEVICENAME
	Turn off swing on DEVICENAME
Temperature Setting	Set DEVICENAME to temperature 5 - 35
Child Lock	Turn on child lock for the DEVICENAME
	Turn off child lock for the DEVICENAME



NOTE

Currently, Amazon Alexa does not support the following settings:

- Timer

VOICE CONTROL WITH GOOGLE HOME/ASSISTANT

Before you can voice control your Breville Ceramic Heater with Google Home/Assistant, you need to link the Breville Home Connect™ account to the Google Home/Assistant app as per the instructions.

Google Home/Assistant Recommended Voice Commands for the Breville Smart Tilt Control™ Ceramic Heater

Supported Settings	Google Home/Assistant Voice Commands
Power	Turn ON DEVICENAME
	Turn OFF DEVICENAME
Mode	Set DEVICENAME to eco
	Set DEVICENAME to low heat
	Set DEVICENAME to high heat
	Set DEVICENAME to fan
Oscillation	Turn on swing on DEVICENAME
	Turn off swing on DEVICENAME
Temperature Setting	Set DEVICENAME to temperature 5 - 35
Child Lock	Turn on child lock for the DEVICENAME
	Turn off child lock for the DEVICENAME



NOTE

Currently, Google Home/Assistant does not support the following settings:

- Timer



TIPS for Amazon Alexa and Google Home/Assistants

- Configure your Amazon Alexa or Google Home/Assistant compatible devices with the "Alexa" or "Google Home/Assistant" app if using, or simply download onto your phone.
- You will find your device listed as the Breville product name in your Breville Home Connect™ app account. Tap on the device in the app to rename your device for more convenient voice commands, e.g. "Heater Living Room" or give it a name, e.g. "Kenny".
- **Training your voice assistant - Voice Match** - Teach your assistant to recognise your voice. This isn't training it to understand English, but rather to recognise your voice as belonging to you. You can do this by going to the Settings menu in the voice assistant app on your phone.
- **Routines** - Amazon Alexa and Google Home/Assistant allow you to combine multiple actions in one voice command, to create a Routine, tap on the 'Routines' option via settings and follow the steps.
- Ensure the primary language is set to English (United States) for all apps.



Care, Cleaning & Storage

Always ensure the main power switch is turned to the Off position, then switch off at the power outlet and unplug prior to cleaning the frame, housing, base and grilles.

To clean the housing, frame and base of the ceramic heater, wipe with a clean, dry cloth. Never use an abrasive cleaner.

To clean the grilles and remove dust that may have accumulated, use a soft, damp cloth or a vacuum cleaner using the brush attachment.

Allow to dry before operating or storing.

If the heater has collected dust or dirt inside the unit or around any elements, have the unit cleaned by a qualified service agent. Do not operate the heater in this condition.

STORAGE

When not in use, store the ceramic heater upright in a cool, clean and dry location.

HINTS & TIPS TO RETAIN HEAT

- Don't overheat your home. The temperature of a heated room in winter should be 18–21°C.
- Your heater will work more efficiently if you stick to Breville's recommended clearance spaces.
- Choose the right size heater for the room type you want to heat.
- Zone off unoccupied rooms by closing doors and only heat the main living areas. Fit window coverings like curtains to halve winter heat loss.
- Put draft stoppers, such as a rolled up towel, at the bottom of outside doorways to keep out cold air.
- Keep the heat in and the cold out by installing wall and ceiling insulation.
- Avoid placing items too close to the heater (both at the front and back) for optimal air flow.



Troubleshooting

TROUBLESHOOTING GUIDE

Before carrying out any of the following service checks, unplug the unit from the power outlet.

PROBLEM	POSSIBLE CAUSES	WHAT TO DO
Product does not turn on.	<ul style="list-style-type: none">• The tip-over switch is not touching the ground fully.• Main power switch on the back of the heater is not switched on.• The power plug is not properly connected to the power outlet.	<ul style="list-style-type: none">• Place the heater on a flat surface to allow the tip-over switch to engage.• Switch the main switch on.• Plug into the power outlet.
Oscillation does not operate properly.	<ul style="list-style-type: none">• There is a foreign object between the base and the body of the heater.• There is a heavy object on the heater, which may cause the heater to tilt and affect oscillation.	<ul style="list-style-type: none">• Remove any foreign objects found.• Remove any heavy objects on the heater.
Heater does not heat.	<ul style="list-style-type: none">• The room temperature is greater than, or equal to the programmed temperature (if applicable) or the default temperature of 25°C. The room temperature is greater than, or equal to the programmed temperature (if applicable) or the default temperature of 25°C.	<ul style="list-style-type: none">• Press the + button to increase the default or programmed temperature.
Display shows 'E1'.	<ul style="list-style-type: none">• Temperature sensor has fallen off or has been damaged.	<ul style="list-style-type: none">• Turn off the heater and contact customer support.
Wi-Fi indicator not flashing after the heater is turned on.	<ul style="list-style-type: none">• Wi-Fi pairing failure.	<ul style="list-style-type: none">• Press and hold the power button for 5-8 seconds until the Wi-Fi indicator begins to flash.
Heater has suddenly stopped operating.	<ul style="list-style-type: none">• The timer has finished counting down.	<ul style="list-style-type: none">• Reset the timer.
Heating or fan power is weak.	<ul style="list-style-type: none">• Dust has collected on the back of the heater.	<ul style="list-style-type: none">• Turn off the heater and unplug from the outlet, then clean the rear grille with a soft, dry cloth before attempting to operate. Plug in the plug and turn the heater back on.
The remote control does not work.	<ul style="list-style-type: none">• The battery is too weak.• The remote is too far away from the device.	<ul style="list-style-type: none">• Replace the battery.• Operate the remote control closer to the heater.
Heater is not appearing in the app or shows offline.	<ul style="list-style-type: none">• The heater has been turned off, moved or disconnected from the power.	<ul style="list-style-type: none">• Reposition the heater such that it is in a safe position.• Re-pair the heater with the app.

TROUBLESHOOTING GUIDE FOR AMAZON ALEXA AND GOOGLE HOME/ASSISTANT

PROBLEM	WHAT TO DO
Why is Amazon Alexa or Google Home/Assistant not responding to my voice commands.	<ul style="list-style-type: none">• Check the internet connection.• Restart your device & mobile phone.• Restart your modem and router.• Make sure your Amazon Alexa or Google-enabled device or mobile phone is in Wi-Fi range.• When you are giving a command to Amazon Alexa or Google Home/Assistant make sure you are clear and there is no unwanted noise in the background.• While the voice assistant is always on in the background, only an activation phrase will allow for the voice assistant to start, registering the commands being relayed. The activation phrase depends on the application being used; For Amazon Alexa, use “Alexa”, while “OK Google” is for Google Home/Assistant.• Ensure your voice is clear and distinct to allow the assistant to accurately record and process the command.• Ask direct questions. Refer to the commands list for recommended commands.

If the problem is not listed, please contact Breville Customer Service Centre (see back cover for contact details)



Notes



Notes

Breville Customer Service Centre

Australian Customers

Phone: 1300 139 798

Web: www.breville.com

New Zealand Customers

Phone: 0800 273 845

Web: www.breville.com

Breville®

Master Every Moment™

Breville, the Breville logo, Master Every Moment, Tilt Control and Breville Home Connect are trademarks of Breville Pty. Ltd. Copyright Breville Pty. Ltd. 2022.
App Store is a trademark of Apple Inc. Google Play and the Google Play logo are trademarks of Google LLC.
All other brands may be trademarks of their respective owners.

Breville's products are distributed in New Zealand under license A.B.N. 98 000 092 928.
Due to continued product improvement, the products illustrated/photographed in this booklet may vary slightly from the actual product.