

the Switch & Press™ 3-in-1

Instruction Book - Suits all LGR310 models



Breville®



CONTENTS

- 2 Limited Product Warranty
- 2 Breville® Recommends Safety First
- 7 Components
- 8 Controls
- 9 Functions
- 12 Care & Cleaning
- 13 Troubleshooting Guide



LIMITED PRODUCT WARRANTY

Breville's warranty for this product covers the repair or replacement if it's found to be defective due to faulty materials, workmanship, or function within the warranty period. All legal warranty rights under applicable national legislation will be respected and will not be impaired by our warranty. For details on length of warranty, to obtain a printed copy or to read full terms and conditions please scan the QR code or visit www.breville.com. Alternatively, call the Breville Service Centre (see back cover for QR149 contact details).



QR149

BREVILLE® RECOMMENDS SAFETY FIRST

At Breville® we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Carefully read all instructions before operating the appliance for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional stickers before using the appliance for the first time.
- Do not place the appliance near the edge of a bench or table during operation.
- Ensure that the surface is level, clean and free of water, etc.
- Keep the appliance clear of walls, curtains and other heat or steam sensitive materials.

- The appliance must be used on a properly grounded outlet. If you are not sure if the power outlets are properly grounded, please consult your electrician.
- Do not, under any circumstances, modify the power plug or use an adapter.
- Do not place the appliance on or near a hot gas or electric burner, or where it could touch a heated oven. Use the appliance well away from walls.
- Provide adequate space above and on all sides around the appliance for air circulation.
- Do not place the appliance on any surface that may be affected by heat. The use of a heat resistant mat under the appliance is recommended on these surfaces.
- Always operate the appliance on a stable and heat resistant surface. Do not use on a cloth-covered surface, near curtains or other flammable materials.
- Do not use on a sink drain board.
- Do not touch hot surfaces. Use the handle to lift and open the top plate.
- Do not leave the appliance unattended when in use.
- Do not allow the power cord to come in contact with the hot cooking plates. Ensure the power cord does not become trapped between the cooking plates during use and storage.
- Always keep the power cord away from any heat source including the accessible surfaces of the appliance, and those of other appliances nearby.
- The appliance is not suitable to be used in a small appliance enclosure. Ensure to leave adequate space all around the appliance. Minimum space of 20cm is recommended.
- Do not place anything on top of the appliance when the lid is closed, during operation and when storing.
- Always switch the appliance off at the power outlet, then unplug the power cord and allow to cool. Ensure the appliance has cooled down before cleaning, attempting to move the appliance, disassembling, assembling and when storing the appliance.
- Do not use chemicals, steel wool, metal scouring pad, harsh abrasives, caustic cleaners or oven cleaners to clean the appliance as these can damage the housing or the coating of the cooking plates.
- Always remove the food from the appliance with a heatproof utensil e.g., silicone spatula or tongs. Never use your hands.

- Do not use sharp objects or utensils inside the appliance as they may scratch or damage the surface of the cooking plates.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Do not place the appliance in direct sunlight. Colour fading and discolouration may occur when the appliance is consistently exposed to UV light.
- Keep the exterior housing and the ceramic-coated non-stick cooking plates clean. Follow the cleaning instructions provided in this book. Refer to Care & Cleaning (Page 12).
- Only use a matching pair of cooking plates. Do not use different plates and operate the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



CAUTION

Do not touch hot surfaces. The accessible surfaces will be hot when the appliance is operating and for some time after use.



CAUTION: Hot Surfaces, Do Not Touch.

This appliance is marked with a hot surface symbol.



WARNING

Fully unwind the power cord from the cord wrap on base before use.





WARNING

Switch off and unplug the appliance from the wall before changing cooking plates. Ensure the appliance and plates are sufficiently cool before removing or changing the plates.



WARNING

Do not operate the appliance under any circumstances without plates installed within the appliance.

-  The symbol on the product or on its packaging  indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and

electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Connect only to a 220V or 240V power outlet.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid or allow moisture to come in contact with the part, unless it is recommended in the cleaning instructions.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. **Misuse may cause injury.**
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be

installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

- During electrical storms, the appliance should be disconnected from the power source at the wall socket to prevent any electrical surges that may arise during the storm and which may inadvertently cause damage to the appliance and its electronic componentry.
- Always turn the appliance to the off position by switching off at the power outlet and unplugging from the power outlet
- Before cleaning, always turn the appliance to the off position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air

circulation.

POWER MANAGEMENT FUNCTION


The appliance has a power management function. The appliance switches to off mode immediately once it is plugged in, after the Power button has been pressed during operation or automatically if there is no further operation after 14 minutes. The off mode power consumption is less than 0.3W. Under this mode, the appliance consumes low power if it remains plugged into a switched-on power outlet.

To save energy, turn the appliance to off mode, switch off at the power outlet and unplug at the power outlet if the appliance is not in use.

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**



COMPONENTS

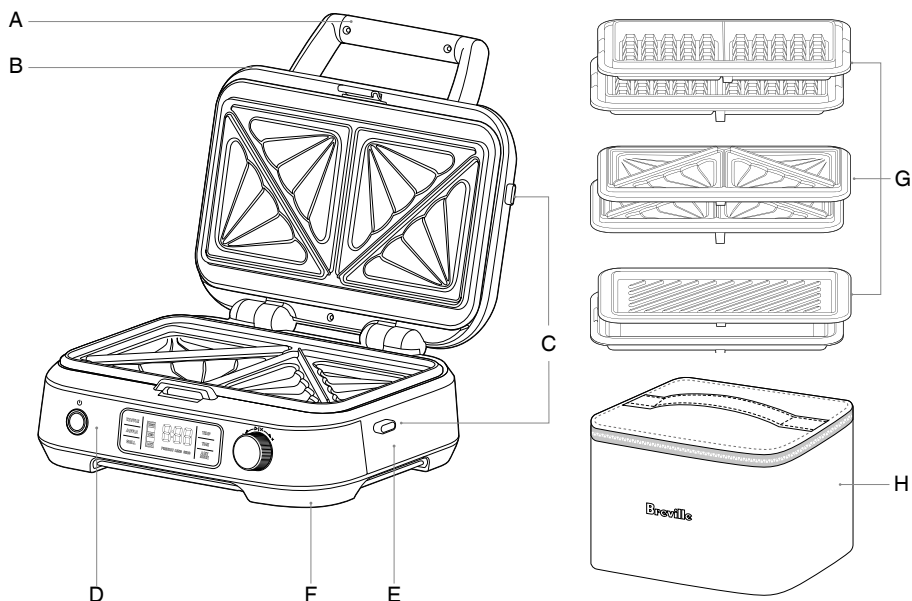


- A. Cool-touch handle
- B. Top housing
- C. Top and bottom plate release
- D. Control panel and display
- E. Bottom housing
- F. Non-slip feet
- G. PFAS-free* ceramic-coated non-stick cooking plates (for Waffle, Jaffle and Grill)
- H. Storage bag for plates (with 4 compartments)


Not Shown

- Cord storage integrated into base

*No PFAS substances were intentionally added during the manufacturing process.

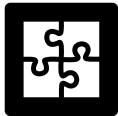

CONTROLS

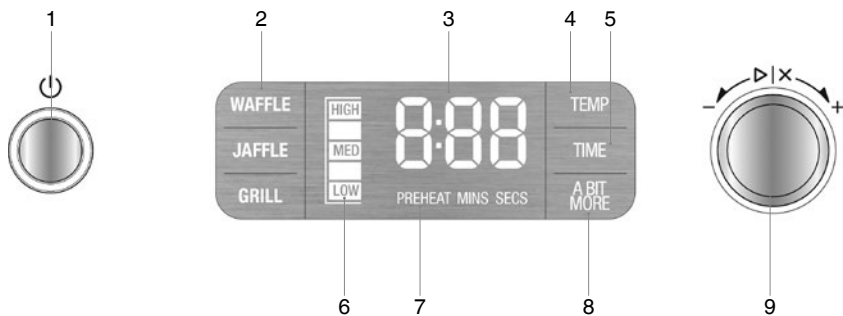

1. Power button
2. Preset menu options (Waffle, Jaffle, Grill)
3. Countdown timer (Minutes & Seconds)
4. Cooking temperature setting
5. Cooking time setting
6. Heat bars
7. Preheat indicator
8. A Bit More™
9. Control dial (Select & Press)



FUNCTIONS

WHAT IS THE BREVILLE SWITCH & PRESS™ 3-IN-1?

 
The Breville Switch & Press™ 3-in-1 is a versatile appliance designed to cook waffles, jaffles, and grilled snacks using removable, ceramic-coated non-stick cooking plates. With preset cooking programs, adjustable temperature and time controls, and a user-friendly display, it allows you to customise each recipe with ease.

3 Removable Plate Sets


Your Breville Switch & Press™ 3-in-1 includes 3 removable sets of cooking plates for waffle, jaffle, and grill. These cooking plates feature a PFAS-free* ceramic-coated non-stick surface for easy food release and effortless cleaning.

Each plate set includes top and bottom plates, designed to work as a pair. Ensure you install the matching top and bottom plates correctly before use. The plates are designed to click securely into place. Improper installation may affect cooking performance, prevent the appliance from operating, or create a potential safety risk. Always ensure both the top and bottom plates are correctly installed before use.


Waffle plates

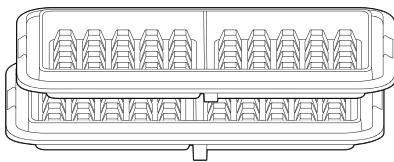

Jaffle plates

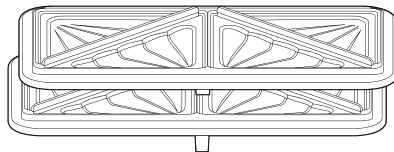

Grill plates

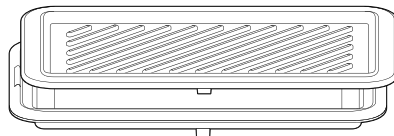

BEFORE FIRST USE

Before first use, remove all promotional stickers and packaging material. Thoroughly clean the cooking plates with warm, soapy water and a non-abrasive soft scouring pad. Rinse and dry thoroughly. Wipe the outside of the appliance with a damp cloth.



WARNING

Ensure the power cord is fully unwound from the cord storage facility before use.

OPERATING YOUR BREVILLE SWITCH & PRESS™ 3-IN-1

1. Place the appliance on a flat, dry surface, ensuring there is a minimum distance of 20cm of space on all sides of the appliance.
2. Insert the desired cooking plate set, ensuring the plates are properly aligned and pressed down firmly until they click into place. Close the lid once the plates are securely installed.



WARNING

Do not operate the appliance under any circumstances without plates installed as the exposed elements may be hot.

3. Plug the power cord into a 220/240V power outlet, then switch on the outlet. The power button light ring will flash and a short beep will sound, indicating the appliance is now in standby mode.
4. Press the power button to turn on the appliance. A long beep will sound, and WAFFLE, JAFFLE and GRILL will appear on the display.
5. Select the menu option that matches the installed cooking plates. The chosen function will illuminate red, and the preset temperature and cooking time will appear on the screen. TEMP and TIME will also illuminate. To make adjustments to the preset cooking temperature or time, press the button and turn the dial to adjust either the cooking temperature or the time as desired.



NOTE

The preset temperatures and times are suggested settings for these food types. They are intended as a guide only and can be adjusted to suit your preference.



WARNING

Only use a matching pair of cooking plates. Do not use different plates simultaneously and operate the appliance.

6. Press the control dial to begin preheating. The power button light ring will turn red to indicate the appliance has started heating. The PREHEAT indicator will also appear in red, and the heat bars will flash during the preheating process.
7. Once preheating is complete, 2 beeps will sound, PREHEAT will extinguish, and the heat bars will stop flashing. The countdown timer will begin automatically.



NOTE

To cancel the cooking cycle at any time, press the control dial. The appliance will return to the last selected cooking function, displaying the last used cooking setting. The light ring will illuminate white, indicating that the appliance has stopped heating.

8. Open the lid and insert your prepared ingredients onto the cooking plates, then carefully close the lid and lock it into place.



NOTE

If the lid is difficult to close and lock at first, rest it on the food for 1 minute to allow the ingredients to soften before locking it into place.



NOTE

- Cooking temperature and time can be adjusted before and during the cooking cycle. Select either TEMP or TIME and then turn the control dial to increase or decrease the corresponding setting as needed.
- During cooking, you can press A BIT MORE, adding 30 seconds of cooking time with each touch.

9. When the cooking time has elapsed, the light ring will return to white, the appliance will sound a long beep to indicate the cooking has completed. The timer will show 0:00 for 30 seconds, allowing time to press A BIT MORE if additional cooking is needed.

10. If A BIT MORE is selected within this period, the timer will reset to 0:30 and automatically count down, and the light ring will turn to red. Otherwise, a short beep will sound, and the display will return to the last used cooking settings.

11. Open the lid and carefully remove your food using silicone cooking utensils. Never use metal tongs, knives, or sharp objects, as these may damage the non-stick ceramic coating.

12. Press the power button, and the appliance will return to standby mode.

13. Switch the appliance off at the power outlet and remove the power plug from the power outlet.



WARNING

Steam may be ejected from between the cooking plates when the lid is closed. The amount will vary depending on the moisture content in the food used. Be careful not to make contact with the steam as it may cause burns.

PRESET MENU OPTIONS

COOKING FUNCTION	PRESET TEMP	PRESET TIME
WAFFLE	4 bars	3 mins
JAFFLE	4 bars	4.5 mins
GRILL	5 bars	3 mins

A Bit More™

The A Bit More™ function can be used when illuminated, which occurs anytime during the cooking cycle or within the first one minute after the cooking time has elapsed. It allows you to extend cooking time in 30-second increments without resetting the timer. Simply touch A BIT MORE, and the additional time will be added to the current cooking cycle. The countdown timer will adjust automatically.

HOW TO REMOVE THE PLATES

The appliance features removable non-stick ceramic cooking plates, allowing you to switch between waffle, jaffle, and grill plates for versatile cooking. The removable plates also make cleaning easy.

To release the installed plates

1. Ensure the appliance is completely cool and unplugged from the power outlet before handling.
2. Use the handle to open the top housing.
3. Press the plate release button on the right side of the top housing to release the top plate, then carefully lift and slide it out of the appliance.
4. Press the plate release button on the right side of the bottom housing to release the bottom plate, then gently lift and slide it out.

To insert new plates

1. Align the plates with the designated slots inside the appliance.
2. Gently slide the plates into place, ensuring they sit securely. Press down firmly until the plates click into position.
3. Close the lid before operating.



WARNING

Switch off and unplug the appliance from the power outlet before changing cooking plates. Ensure the appliance and plates are sufficiently cool before removing or changing the plates.

HINTS & TIPS:

- The appliance stores the last used cooking settings for convenience. To reuse them, press the control dial to start a new cooking cycle, and the appliance will preheat automatically. To cancel, select any menu option, press the power button, or unplug the appliance, which will return the cooking settings to default for the next use.
- The cooking temperature and time can be adjusted when TEMP and/or TIME are illuminated before or during cooking.
- After 10 minutes of inactivity, and if the appliance has cooled down, it will return to standby mode. Press the POWER button to wake and operate the appliance.
- If the power button light ring illuminates white, it indicates that the appliance is not actively heating. If the power button light ring illuminates red, it indicates that the appliance is actively heating.
- During consecutive cooking cycles, the appliance's temperature sensor will automatically adjust the preheating time based on the selected cooking temperature.



CARE & CLEANING

Always unplug the power cord from the power outlet after use for safety reasons.

Allow the appliance and the plates to cool before cleaning.

Always clean the appliance after each use to prevent a build-up of baked-on foods and fats.

Cooking Plates

To keep your cooking plates clean, follow these steps after use:

- Once completely cool, release and remove the used plates from the appliance.
- The cooking plates are dishwasher safe. Place the cooking plates in the dishwasher (top shelf only).
- Alternatively, wash the plates in warm, soapy water using a soft, damp sponge. A non-abrasive liquid cleanser may be used to prevent stains. Apply the cleanser to the sponge, not directly onto the plate, before cleaning.
- For stubborn residue, use a non-abrasive plastic scouring pad or a nylon washing brush. Rinse thoroughly and dry before reattaching the plates.



NOTE

Do not use metal kitchen utensils or abrasive cleaning materials to clean the cooking plates as this may damage the ceramic non-stick coating.

The Housing

- Wipe the exterior of the appliance with a soft, damp sponge.
- Dry thoroughly before storing or use.

Cleaning Agents

Do not use abrasive scouring pads or cleansers on either the cooking plates or the housing, as they may scratch the surface. Use only warm soap water with a soft cloth.

STORAGE

Before storing, ensure all removable parts are thoroughly washed and dried. Reinstall one set of cooking plates to the appliance and store the remaining two sets (four plates) separately in the compartments of the included storage bag. Do not place any objects on top of the appliance.

Wrap the power cord in the cord storage located on the underside of appliance.

Do not place any objects on top of the appliance.



WARNING

The handle is designed for opening and closing the appliance during cooking. It should not be used for moving or carrying the appliance.



TROUBLESHOOTING

Problem	Possible Cause	What to Do
Appliance will not turn on	• The appliance is not receiving input power.	• Check the appliance is plugged into a power outlet and turned ON at the switch.
	• Heating element malfunction.	• If the appliance will not operate, contact Breville Customer Service for assistance.
Error 'Er1' on display with beeping sound	• Ambient temperature low.	• Move to a warmer location.
	• NTC Error.	• Contact Breville Customer Service for assistance.
Error 'Er2' on display with beeping sound	• Ambient temperature high.	• Move to a cooler location.
	• NTC Error.	• Contact Breville Customer Service for assistance.
Error 'Er3' on display with beeping sound	• Abnormal temperature detected.	• Unplug the appliance and allow to cool. Ensure the plates are correctly installed into the unit before resuming cooking.
Plates cannot be installed	• Food or other material in heating area.	• Check the correct plate is being installed into the upper or lower location. • Unplug the appliance and allow to cool. Remove any food or other material from the plate locating slots and tabs, or heating area.



NOTES



NOTES

Breville Customer Service Centre

Australian Customers

Phone: 1300 139 798

Web: www.breville.com

New Zealand Customers

Phone: 0800 273 845

Web: www.breville.com

Breville®

Master Every Moment™

Breville, the Breville Logo, A Bit More, and Switch & Press are trademarks of Breville Pty Ltd ("Breville") and Breville's products are distributed in Australia and New Zealand under license.
Copyright Breville Pty. Ltd. 2025.

Due to continued product improvement, the products illustrated/photographed in this booklet may vary slightly from the actual product.