

FISHER & PAYKEL

INTEGRATED COLUMNS

**RS4621F, RS6121F, RS7621F,
RS6121S & RS7621S models**

USER GUIDE

NZ AU GB EU

CONTENTS

Introduction	3
Safety and warnings	4
Storage features	10
Refrigerator	10
Freezer	11
ActiveSmart™ special features	12
Control panel — Refrigerator	12
Control panel — Freezer	13
Variable temperature zones	14
Max Cool	15
Fast Freeze	15
Bottle Chill	15
Ice	15
Ice Boost	15
Operating instructions	16
Cleaning care	19
Food care	21
User warnings and sounds	22
Troubleshooting	23
European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE)	26
Service & Warranty	27

IMPORTANT!

SAVE THESE INSTRUCTIONS

The models shown in this User guide may not be available in all markets and are subject to change at any time. For current details about model and specification availability in your country, please go to our website fisherpaykel.com or contact your local Fisher & Paykel dealer.


Registration

Register your product with us so we can provide you with the best service possible.

To register your product visit our website: fisherpaykel.com

INTRODUCTION

Welcome to the family of Fisher & Paykel appliances. Our team has spent thousands of hours designing, engineering and testing this Integrated Column to ensure you get the perfect product for your home. For more information on your product please visit fisherpaykel.com or contact our Customer Care team.

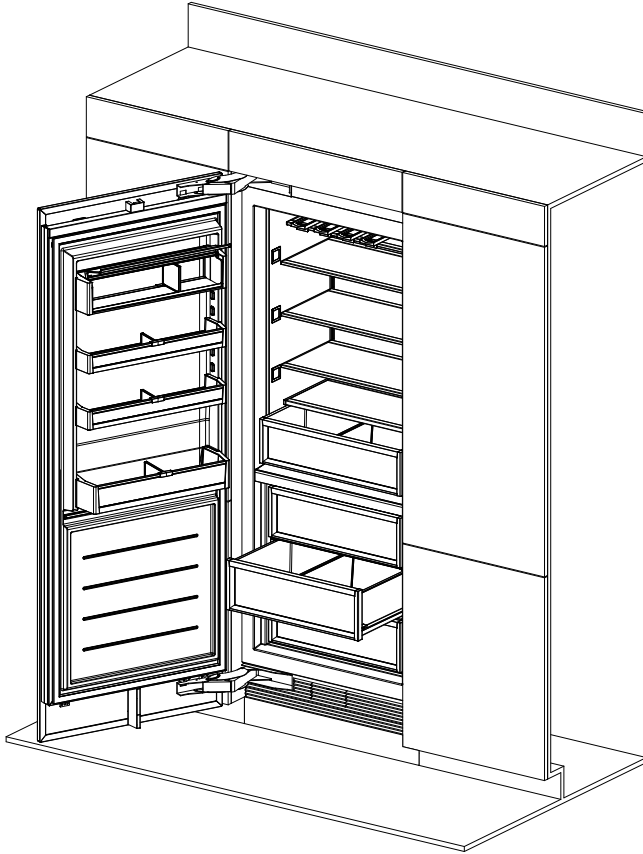

WARNING!



Electric Shock Hazard

Read and follow the safety and warnings outlined in this user guide before operating this appliance.

Failure to do so can result in death, electric shock, fire or injury to persons.

WARNING!



R600a

This refrigerator contains flammable refrigerant isobutane (R600a).

Use this appliance only for the intended purpose as described in the user guide.

IMPORTANT SAFETY INSTRUCTIONS

WARNING!

When using this appliance always exercise basic safety precautions including the following:

- **Children should be supervised to ensure that they do not play with the appliance.**
- **Cleaning and user maintenance shall not be undertaken by children without supervision.**
- **This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.**
- **The manufacturer's installation instructions for product and cabinetry ventilation must be followed when installing the appliance.**
- **To avoid hazard due to instability of the appliance, it must be fixed in accordance with installation instructions.**
- **Keep ventilation openings, in the appliance enclosure or the built-in structure, clear of obstruction.**
- **Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.**
- **Do not damage the refrigerant circuit.**
- **In case of damage to the refrigerant circuit, ventilate the area by opening all windows.**
 - **Do not operate electrical equipment or any other equipment that may produce arcs, sparks or flames in the area. Contact your Fisher & Paykel trained and supported service technician immediately to arrange for the appliance to be repaired.**

- It is hazardous for anyone other than an authorised service person to service this appliance.
- In Queensland, the authorised service person must hold a gas work licence or authorisation for hydrocarbon refrigerants to carry out service or repairs which involve removal of covers.
- Connect to potable water supply only.

Electrical

- This refrigerator must be installed in accordance with the installation instructions before use.
- To allow disconnection of the refrigerator from the supply after installation, incorporate a switch in the fixed wiring in accordance with the local wiring rules.
- If the power supply cord is damaged, it must only be replaced by your Fisher & Paykel trained and supported service technician.
- **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

IMPORTANT!

- Your refrigerator is designed to operate for many years without the need for service checks. However, if your refrigerator is malfunctioning, have it attended to by your Fisher & Paykel trained and supported service technician as soon as possible.
- If you suspect that the product is not getting cold—items such as ice cream are melting—remove all perishable food and store in another appliance or cooler to prevent spoilage. Immediately call for a service technician.

Cleaning

- Use only soap based cleaning products.
- Avoid using anti-bacterial cleaning products on either the interior or exterior of the cabinet as they may cause rusting of metal components and cracking of plastic components.

Disposal

- Extreme care must be taken when disposing of your old appliance to avoid hazards:
 - The flammable refrigerant gas must be safely removed by a qualified service technician.
 - The thermal insulation foam in this appliance may contain flammable insulation blowing gases, any exposed foam may be highly flammable and must be carefully treated during disposal.
 - **DANGER:** The doors and panels should be removed and the shelves left in place so that children may not easily climb inside.
- Consult your local energy authority or local codes as to the best way to dispose of your old appliance.

Storing food and drinks

- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Never store volatile or flammable materials in your appliance as they may explode.
- Never freeze liquids in glass containers. Liquid expands during freezing, which may cause the container to explode.
- Never freeze carbonated drinks. They may explode.

Water filter

IMPORTANT!

- The water connection to your Ice & water refrigerator must be installed by a qualified plumber or Fisher & Paykel trained and supported service technician and comply with all state and local laws.
- Installation and use **MUST** comply with all state and local plumbing codes. Check with your local public works department for plumbing codes. You must follow their guidelines as you install the water filtration system.
- To avoid serious illness or death, only connect your water filter to safe drinking water.
- The water filter cartridge needs to be changed when the replacement indicator icon illuminates. This will happen every 6 months.
- If the water filtration system has been allowed to freeze, replace filter cartridge. Failure to replace the disposable filter at recommended intervals may lead to reduced filter performance and failure of the filter, causing property damage from water leakage or flooding.
- In cases of excessively reduced filter life — we recommend that you consult a local plumber or your water supplier for advice on suitable filtration requirements for the water supplied to your home.
- Filter replacement is the consumer's responsibility and will not be covered by the warranty except in the case of faulty parts or materials within the filter cartridge.
- If the water has not created ice for some time or ice has an unpleasant taste or odour dispose of ice and refer to 'Automatic ice' for flushing instructions. If unpleasant taste or odour persists, you may wish to fit a new filter cartridge.
- Use new tubing supplied with the refrigerator. **DO NOT** reuse old tubing from old water and ice connections.

- Your water filtration system can withstand up to 120psi (827kPa) of water pressure. Ensure the supplied pressure reducing valve is installed before installing the water filtration system. **DO NOT** install if water pressure exceeds 120psi (827kPa).

To reduce the risk associated with property damage due to water leakage or flooding:

- **DO NOT** install systems in areas where ambient temperatures may go above 100°F (38°C) or drop below 33°F (0.6°C).
- **DO NOT** install on hot water supply lines. The maximum operating water temperature of this filter system is 100°F (38°C).
- **DO NOT** install where water hammer conditions may occur. If water hammer conditions exist, you must install a water hammer arrester.

WARNING!

To reduce the risk associated with choking:

- **DO NOT** allow children under 3 years of age to have access to small parts during the installation of the water filter.

Ice making


IMPORTANT!

- Avoid contact with the moving parts of the ice maker ejector mechanism, and do not place your fingers on the automatic ice- making mechanism while the appliance is in operation.
- Do not use ice cubes that may have become discoloured, usually with a green-blue colour. If such discolouration is noted, discard the ice cubes and contact your Fisher & Paykel trained and supported service technician.

STORAGE FEATURES

Refrigerator

Easy-clean design with evenly distributed lighting and aluminium trims.

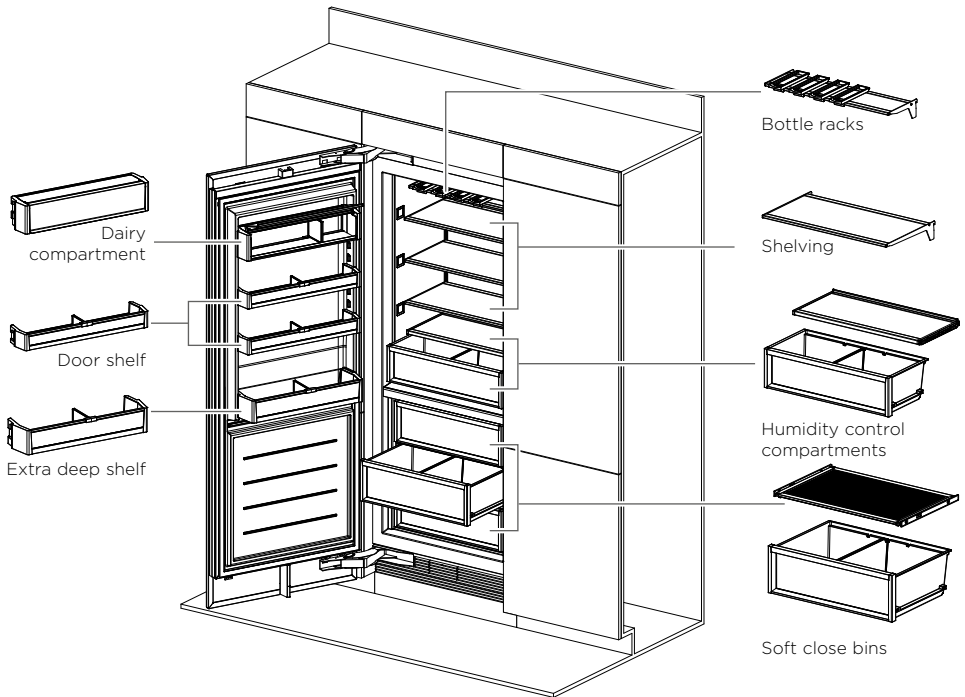

REFRIGERATOR COMPONENTS

Bottle racks

Adjustable and removable bottle racks.

Dairy compartment

- Dividers to allow organisation of food items.
- A lid to prevent tainting of dairy items from the rest of the upper compartment.

Humidity controlled compartments

These compartments help to provide a humid microclimate to extend the storage times of fruit and vegetables.

Shelving

- Selectable shelf heights.
- Heat treated safety glass.
- Adjustable door shelves with dividers.

Soft close bins


Soft close bins ensure bins close quietly and properly.

- Adjustable bin dividers.
- Mats.

STORAGE FEATURES

Freezer

Easy-clean design with evenly distributed lighting and aluminium trims.

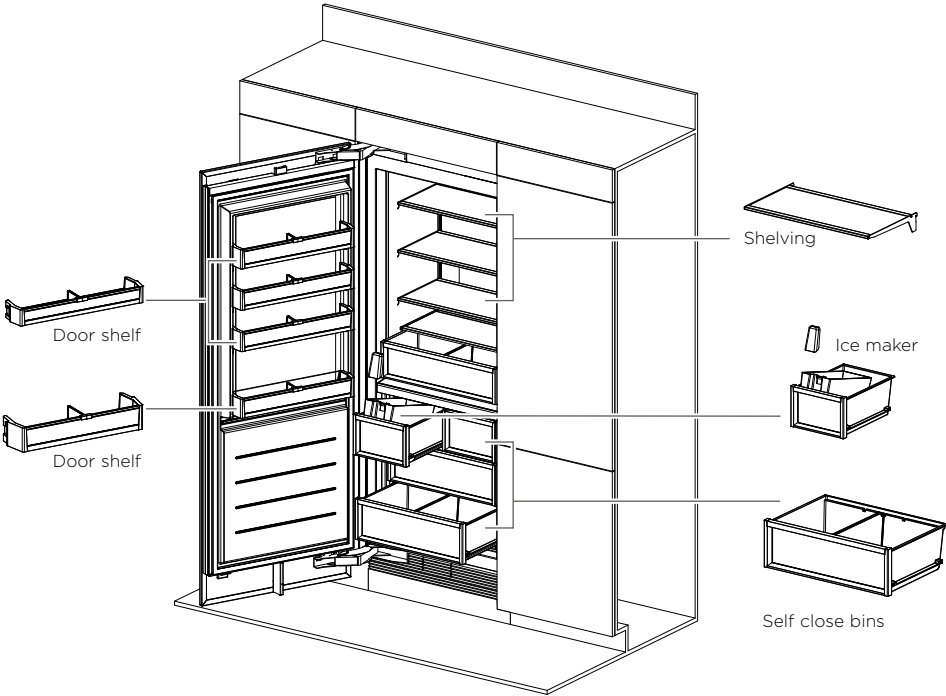

FREEZER COMPONENTS

Shelving

- Selectable shelf heights.
- Heat treated safety glass.
- Adjustable door shelf dividers.


Ice maker

- Adjustable production speeds.
- Removable ice container.
- Hygienic ice scoop.





Self close bins

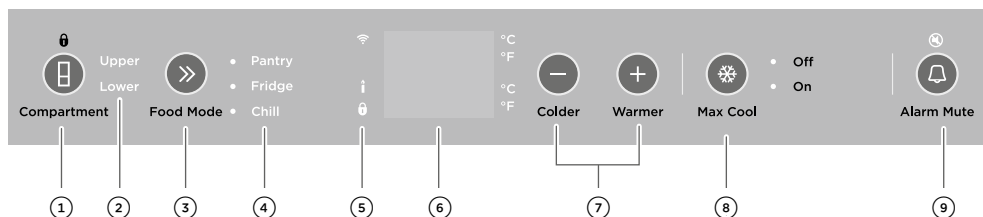- Freezer bins self close to ensure all bins close properly.
- Adjustable bin dividers.


Control panel — Refrigerator







- | | | |
|---|---|---|
| ① | Compartment | Allows you to unlock the control panel and enable compartment selection. Press for 4 seconds to activate your appliance for the first time.

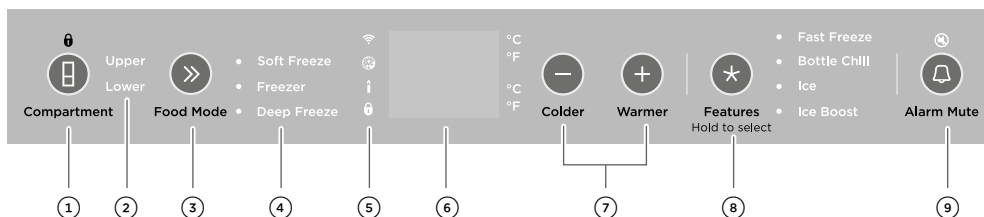The control panel will automatically lock when inactive for more than 10 seconds or when the door is closed. To unlock, press for 2 seconds. |
| ② | Compartment lights | Lights illuminate to show which compartment is selected. |
| ③ | Food Mode | Allows you to select the food mode for the selected compartment. |
| ④ | Food Mode lights | Lights illuminate to show which food mode is selected. |
| ⑤ | WiFi |  Illuminates to show wireless remote mode is enabled. Visit fisherpaykel.com/connected for further details on using this feature. |
| | Sabbath mode |  Illuminates to indicate that Sabbath mode is activated. |
| | Key lock |  Illuminates to indicate that the keys on the control panel are locked. When the door is closed the display is automatically locked. |
| ⑥ | Digital display | Displays the set temperature of the compartments. To change between Celsius and Fahrenheit on the display:
• Press + and » together for 4 seconds. |
| ⑦ | Colder Warmer | Allows you to adjust the temperature of the selected compartment. |
| ⑧ |  Max Cool | Boosts the cooling speed of your refrigerator by dropping the refrigerator to its coldest temperature for a set time, dependent on the food mode in use. |
| ⑨ | Alarm Mute | This button has a dual function—it allows you to deactivate door alarms for 20 minutes and/or mute key tones on the control panel. |

Control panel — Freezer



1 Compartment	Allows you to unlock the control panel and enable compartment selection. Press for 4 seconds to activate your appliance for the first time. The control panel will automatically lock when inactive for more than 10 seconds or when the door is closed. To unlock, press for 2 seconds.
2 Compartment lights	Lights illuminate to show which compartment is selected.
3 Food Mode	Allows you to select the food mode for the selected compartment.
4 Food Mode lights	Lights illuminate to show which food mode is selected.
5 WiFi	 Illuminates to show wireless remote mode is enabled. Visit fisherpaykel.com/connected for further details on using this feature.
Filter	 Illuminates to indicate that water filter replacement is required.
Sabbath mode	 Illuminates to indicate that Sabbath mode is activated.
Key lock	 Illuminates to indicate that the keys on the control panel are locked. When the door is closed the display is automatically locked.
6 Digital display	Displays the set temperature of the compartments. To change between Celsius and Fahrenheit on the display: <ul style="list-style-type: none"> Press + and » together for 4 seconds.
7 Colder Warmer	Allows you to adjust the temperature of the selected compartment.
8 Features	Allows you to scroll and select features: <ul style="list-style-type: none"> Fast Freeze Bottle Chill Ice Ice Boost Refer to 'Selecting Features' for details on these features.
9 Alarm Mute	This button has a dual function—it allows you to deactivate door alarms for 20 minutes and/or mute key tones on the control panel.

Variable temperature zones

Separate food modes, in both fridge and freezer, allow you adjust the temperature independently for optimal storage.

REFRIGERATOR FOOD MODES		TYPES OF FOOD TO STORE
Pantry (12°C/54°F)	'Pantry' mode provides a cool, dark place for a wide variety of foods that perish quickly or may spoil at room temperature, but are too sensitive to be stored at normal refrigerator temperatures.	<ul style="list-style-type: none"> Bananas, avocados, tomatoes. Dry food items such as grains, flours, sugars, crackers, cereal, baked goods, tortillas, wraps and breads. Spreads, preserves, honey, tropical fruits, nuts and seeds, chocolate and fresh herbs. Wine.
Fridge (3°C/38°F)	The ideal mode for fresh, everyday foods. This mode offers a higher relative humidity than many other refrigerators allowing fresh foods such as fruits and vegetables, meats and cheeses to stay fresher for longer.	<ul style="list-style-type: none"> Fruit and vegetables, dairy products, jams and chutneys/preserves, meats and drinks.
Chill (-0.5°C/31°F)	<p>'Chill' mode is an extension of 'Fridge' mode, providing the perfect storage zone for highly perishable food to ensure they retain their vital freshness and quality. These items will last slightly longer here compared with storage at 'Fridge' mode.</p> <p>Note: Ensure these highly perishable items are consumed within their recommended storage times.</p>	<ul style="list-style-type: none"> Highly perishable meats, poultry and seafood. Alcoholic beverages such as beer.

ACTIVSMART™ SPECIAL FEATURES

FREEZER FOOD MODES		TYPES OF FOOD TO STORE
Soft Freeze (-9°C/16°F)	'Soft Freeze' mode is an extension of your refrigerator, extending the shelf life of perishable items while maintaining the quality. 'Soft Freeze' mode allows easy portioning of food and the ability to heat, cook or serve foods straight from the compartment without waiting for it to thaw.	<ul style="list-style-type: none"> Meats, seafood, soups, sauces, pureed foods, bread, desserts and pastries. <p>Note: 'Soft Freeze' mode is not recommended for storage of creamy desserts such as ice cream.</p>
Freezer (-18°C/-1°F)	'Freezer' mode is for general frozen food items that require storage between 1-12 months.	<ul style="list-style-type: none"> Meat, poultry, seafood, pre-cooked foods and leftovers, some fruits and vegetable, ice cream, and other frozen desserts.
Deep Freeze (-25°C/-13°F)	'Deep Freeze' mode is for frozen food items that may need to be stored for longer periods. 'Deep Freeze' extends the shelf life of general frozen items by up to 6 months longer than that of 'Freezer' mode.	<ul style="list-style-type: none"> General frozen food that is required to be stored for extended times – eg larger cuts of meat.

Note: Not all combinations of food modes are available in all compartments. If a food mode is not available, it will not be selectable on the control panel.



Max Cool

Boosts the cooling speed of your refrigerator by dropping the refrigerator to its coldest temperature for a set time, dependent on the food mode in use. We recommend using 'Max Cool' or 'Fast Freeze' when you are adding food items to your appliance, such as after grocery shopping. This feature will ensure the food is chilled/frozen within the shortest period of time, locking in the freshness and extending the shelf life of your food.

Fast Freeze

Boosts the freezing speed by dropping the freezer to its coldest temperature for a set time dependent on the food mode in use. Offered on 'Soft Freeze' and 'Freezer' modes.

Bottle Chill

This feature allows you to rapidly chill your beverage for a set time depending on your chosen food mode.

Ice*

Turns on your automatic ice. This feature is only available in the lower compartment.

Ice Boost*

Increases ice production by up to 30%, and deactivates automatically after 24 hours.

* This feature is not available if the compartment is set to 'Soft Freeze'. If ice making is turned on and the food mode is changed to 'Soft Freeze' any ice that is already in the ice bin may melt and form clumps. To avoid this either remove the ice or use a different compartment for 'Soft Freeze'.

» Selecting the Food Mode

- Select the desired compartment.
- Press » to scroll through the available modes. The light next to the name of the 'Food Mode' will illuminate as you scroll to indicate which mode is selected.

Adjusting the temperature

Each 'Food Mode' will automatically default to the recommended temperature setting. Once you have selected the compartment and required 'Food Mode', the temperature can be adjusted as desired.

- To increase the temperature of your selected 'Food Mode', press + .
- To decrease the temperature of your selected 'Food Mode', press - .


★ Selecting Features

Pressing ★ will scroll through the available 'Features' for the compartment and mode you have selected. A blinking light indicates the current position when scrolling through the list.

To activate/deactivate a feature:

- Select the feature from the list, by scrolling through and stopping at the feature you wish to use.
- Press ★ for 2 seconds.

Bottle Chill


 
 
An alarm will sound, 'Bottle Chill' will flash and  will illuminate after the elapsed time to remind you to remove your beverage.

To silence the alarm:

- Press ★ once.
- The time taken to chill depends on the size of your beverage. If your beverage is not cold enough after the set time, return it to the compartment and reset the 'Bottle Chill' feature.

Automatic ice maker (freezer only)

Before turning on your automatic ice maker, the water filter must be installed (refer to your installation guide) and flushed to remove any impurities or trapped air in the filter system.


- ① Turn your ice maker on, refer to 'Selecting Features'.
- ② Press the ,  and  together for 4 seconds then close the doors. The ice tray will empty the water into the bin below. The ice tray will only empty after the doors are closed.
- ③ Repeat step ② to remove dust in the ice tray collected during manufacture and transport.
- ④ Empty the water, dry the bin and return it correctly.
- ⑤ Once your ice maker is turned on the first bin of ice may be discoloured, this is not harmful and normal during the flushing process. Discard the first full bin of ice made. Your ice maker is now ready for use.
 - The performance of your water filter will increase with use, reaching optimum performance after 4-5 full bins of ice.

Turn the ice maker off if:




- There is no water supply for several hours.
- You are removing the ice storage bin for a period of time.
- You are going on holiday/vacation.

Water filter

The water supplied to your appliance for ice making is filtered to remove impurities through a filter located the bottom front of your appliance. Replace your filter cartridge every 6 months.

- There is a replacement indicator icon  on the control panel which will appear when the filter needs replacing.
- Replacement filter cartridges can be purchased online from fisherpaykel.com or by calling Fisher & Paykel Customer Care. Details of the replacement filter cartridge are labelled on the cartridge. Instructions on how to install your replacement water filter are provided with the filter.




To reset the filter indicator:

- Press  and  together for 4 seconds.
- The  on the control panel will turn off when reset.

IMPORTANT!








- **We recommend the water filter to be used from the time of installation.**
- **Do not reset indicator before filter is changed or filter monitoring will be inaccurate.**

Alarm Mute

- To activate, press  once.
- The light above  will illuminate to indicate the appliance is muted.
- If the doors are left open for 5 minutes or more, the compartment light turns off and normal door alarms are suspended.
- 'Alarm Mute' will deactivate after 20 minutes.
- To deactivate manually, press  again.
- Closing the door also deactivates the 'Alarm Mute'.

Sabbath mode



When activated — the display, all alarms and lights are deactivated for 80 hours.

- To activate Sabbath mode, press ,  and  together for 4 seconds.
- The  icon on the control panel will illuminate.
- To deactivate manually, press ,  and  together for 4 seconds.

Note: If you turn off your appliance while in Sabbath mode, it will resume automatically once the appliance is switched on again.





Key mute

Key mute allows you to silence all button presses.

- To activate key mute, press  for 2 seconds, a single confirmation beep will be heard.
- Once key mute is activated, all key sounds are silenced.
- Door alarms and the 'Bottle Chill' alarm are still operational.
- To deactivate, press  for 2 seconds, a single confirmation beep will be heard.

Key lock

Key lock allows you to disable the buttons on the control panel. This is useful when cleaning your appliance.

- To activate key lock, press  for 2 seconds.
- The  icon on the control panel will illuminate.
- To deactivate, press  for 2 seconds.
- The  icon will not illuminate.

Door alarms

- If the door is left open, the alarm will beep after 60 seconds.
- If the door remains open, subsequent beeps will sound every 30 seconds for 5 minutes.
- If the door remains open for 5 minutes or longer, an alarm will sound continuously and the interior compartment light(s) will turn off.

Exterior cleaning

Toe kick grilles and filter

Your Integrated Column is fitted with a toe kick grille to protect the internal working components. We recommend cleaning the grille and filter in conjunction with changing your water filter cartridge (every 6 months).

The condenser coils of your Integrated Column require periodic cleaning by a Fisher & Paykel trained service technician.

- To maximise operating efficiency, keep ventilation openings clear of obstructions by regularly vacuuming the flooring in front of your appliance.
- More frequent cleaning may be necessary for dusty homes or those with pets shedding hair.

Interior cleaning


Do not use harsh chemicals, abrasives, ammonia, chlorine, bleach, concentrated detergents, solvents or abrasive scouring pads on any part of your appliance. Some of these chemicals may damage your appliance.

Clean all surfaces with a mild liquid detergent dissolved in warm water and a soft cloth. Rinse with clean water and dry with a clean, lint-free cloth.

Humidity control lids (refrigerator only)


Upper compartment:

- ① To remove, hold both sides of the shelf and lift straight up to unclip from the runners (**A**).
- ② Pull the shelf towards you (**B**).

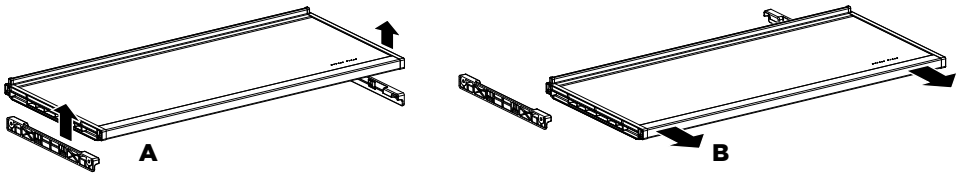

Lower compartment:

- ① To remove, lift the front edge of the shelf up (**C**).
- ② Pull the shelf towards you to unclip from the runners (**D**).

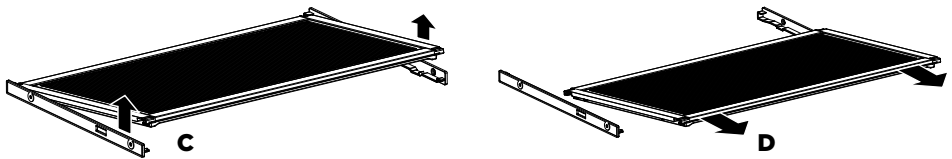


Cantilever glass shelves

- ① To remove, hold the front and back edge of the shelf firmly.
- ② Push the shelf up vertically to dislodge from back support lugs.
- ③ Pull the shelf towards you.

Bin

- ① To remove a bin, extend the bin on its runners (**A**), and empty the bin.
- ② Push the securing tabs on both sides of the bin corners, then push the bin firmly upwards to dislodge from the runners (**B**).
- ③ Pull the bin towards you to remove. Push both runners back into the appliance.
- ④ To return the bin, extend the runners and place the bin on top of the runners.
- ⑤ Push the bin slowly onto the securing tabs until you feel it clip onto the runners. Ensure the bin tabs are clipped securely onto the runners before use.

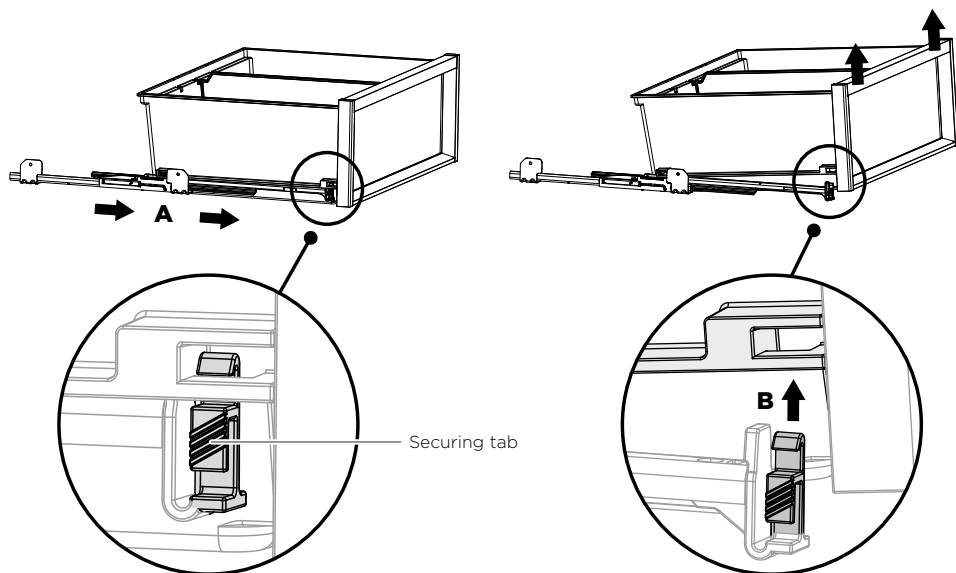

IMPORTANT!

The runners are pre-lubricated to help open and close the bins. They do not need to be lubricated again. Do not remove the grease from the runners to maintain its smooth function. Do not immerse the runners in water.

Holiday/vacation (freezer only)

Before leaving:

- Turn the ice maker to OFF on the control panel.
- Shut off the water supply to the appliance.

On return:

- Turn on the ice maker. Discard the first full bin of ice.

For best food care

- Store only high-quality, fresh food in your appliance.
- Store perishable foods in the appliance immediately after purchase. Storing at room temperature increases the rate of deterioration and can allow harmful microbial growth.
- Foods such as meat, poultry and seafood should be well wrapped or sealed in suitable packaging to prevent dehydration, colour deterioration, loss of flavour, and transfer of odour.
 - We recommend storing these foods on the bottom shelf of your appliance or in one of the bins to prevent potential spills and cross-contamination with other foods.
- Ensure hot foods and beverages are cooled sufficiently before placing them into the appliance. Hot items may cause other foods to warm to unsafe temperatures. It may also cause sealed items to sweat/condensate—which is undesirable.
- Beverages are best stored standing upright in the door shelves or on the bottle racks provided.
- Ensure raw and cooked foods are stored separately to avoid cross-contamination.
- Consume food items within the recommended storage times. Discard foods that show sign of spoilage.
- Keep door openings to a minimum to maintain optimum storage temperatures inside your appliance.
- We recommend using 'Max Cool' or 'Fast Freeze' when you are adding food items to your appliance, such as after grocery shopping. This feature will ensure the food is chilled/frozen within the shortest period of time, locking in the freshness and extending the shelf life of your food.

Items stored in your refrigerator

- Dairy items such as butter and cheeses should be stored in the covered door shelf to minimise any transfer of odour or odour absorption from other foods.
- Eggs should be stored in their carton to avoid absorption of strong odours through their porous shell structure.

Items stored in your freezer

- We recommend cooling carbonated beverages only when the 'Bottle Chill' function is active.
 - Do not store carbonated drinks without this function in the freezer. Failure to remove beverages could lead to freezing liquid and the likelihood of bottle/can explosion.
- Ensure air is removed from packaging to avoid large formation of ice crystals and prevent freezer burn.
- To maintain freshness and quality, we recommend defrosting foods in the refrigerator. Ensure partially or fully defrosted foods are never re-frozen—cook immediately.

Faults

- In the unlikely event a fault occurs, 4 rapid beeps will be heard and the fault will be displayed on the control panel.
 - Record the fault code displayed on the control panel and contact a Fisher & Paykel trained and supported service technician in order to repair the fault. You can do this by going online to fisherpaykel.com or by contacting our Customer Care Centre.

Normal appliance sounds

Integrated Columns has been designed to have excellent energy ratings and cooling performance. As a result, it can produce sounds somewhat different to your old appliance.

 
 

Normal operational sounds include:

- Low frequency ticking sound. This is the valve that controls cooling to each compartment. This noise will only last for a few seconds at a time.
- Fan air flow sound. Integrated Columns has fans which change speed depending on demand. During cooling periods, such as after frequent door openings, fans circulate the cold air in the appliance producing some air flow sound. This is quite normal.
- Cracking or popping sounds. This may occur when the automatic defrost function is operating.
- Running water sound. This is the liquid refrigerant in the system and can be heard as a boiling or gurgling noise.
- An audible hissing sound after closing the freezer door. This is due to the pressure difference between the warm air that has entered the cabinet and suddenly cooled, and the outside air pressure.
- Humming sounds. This is the compressor running and is quite normal.
- Ice maker sounds:
 - Motor operation (low humming).
 - Running water as the ice maker and/or water tank fills.
 - Water valve opening and closing (hissing sound).
 - Ice being loosened from the ice moulding tray (cracking).
 - Ice dropping into bin (clunking).
- Other sounds may be heard for the following reasons:
 - Floor uneven or weak.
 - Bottles or jars rattling on shelves.

TROUBLESHOOTING

If there is a problem with your appliance, please check the following points before contacting your local Fisher & Paykel trained and supported service technician or the Customer Care Centre.

Product parts and accessories can be purchased through the Fisher & Paykel Customer Care Centre, or online at fisherpaykel.com (this service is available to selected markets only).

PROBLEM	POSSIBLE CAUSES	WHAT TO DO
Appliance does not operate	No electricity at power socket.	Check that the plug is correctly connected and power switched on.
		Check another appliance at the same outlet.
		Check house fuse.
Light not working	Light not functioning.	The lighting cannot be serviced by the user. Contact your Fisher & Paykel dealer or trained and supported service technician.
	Appliance not working.	Check appliance is turned on at the wall or at the isolating switch.
Light and display not working	Product in Sabbath mode.	Press  ,  and  together for 4 seconds.
Storage compartments too warm	Temperature setting not correct.	See 'ActiveSmart™ special features' section of this User guide.
	Frequent door openings.	Minimise door openings to allow temperature to stabilise.
	Large amount of food has been recently added.	Select 'Max Cool' or 'Fast Freeze' features to assist in lowering the temperature quickly.
Food freezing in the refrigerator	Temperature setting is too cold.	Increase the temperature setting. See 'ActiveSmart™ special features' section of your user guide.
	Food placed directly in front of air outlets.	Move chill sensitive foods away from the air outlets.
Unfamiliar noises	Cabinet not stable or level.	See Installation guide supplied with this appliance.
	Freezer is defrosting.	This is normal.
Ice maker sounds	Normal ice maker operation.	See 'User warnings and sounds' section.
Food Mode is not available	Not all combinations of food modes are available in all compartments.	Try to select the desired Food Mode in a different compartment.

TROUBLESHOOTING


PROBLEM	POSSIBLE CAUSES	WHAT TO DO
When the appliance door is opened 4 rapid beeps sound and a code is displayed on the control panel		Record the code on the control panel and contact Customer Care Centre.
Water in the vegetable bins	Condensation is formed by the water produced by fruit and vegetables.	A small amount of condensation is beneficial for fruit and vegetable storage. Wipe out water with a cloth.
Exterior of cabinet is warm	Note: This is normal.	
Condensation on outside of appliance	Not unusual during periods of high humidity.	Wipe dry.
Condensation/ice inside compartment	Frequent or long door openings.	Minimise door openings.
	Door gasket leaking.	Check and clean door gasket seal.
	Not unusual during periods of high humidity.	Wipe dry.
	Door not closing tightly.	Arrange items in the compartment so door can close tightly.
	Doors not aligned.	Call a service technician.
Bin does not slide in and out evenly	Packaging trapped.	Check to ensure no food or packaging is trapped behind the tray/bin.
Door not closing	An obstruction is blocking door closing.	Move obstruction.
	Appliance not installed correctly.	Refer to your installation guide supplied with this appliance to ensure your appliance has been installed correctly.
Freezer door will not open	The door has been recently opened.	Wait 30 seconds and try again.
Small or large ice cubes	Water line is kinked/squashed.	Check the external water line is not kinked/squashed. If it is not kinked/squashed contact Customer Care to arrange a technician to check the internal water line.
Frozen food items are soft or melting		Remove items and place in another freezer or cooler and call Customer Care immediately.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSES	WHAT TO DO
Automatic ice maker does not work	Ice maker has not been turned on.	Switch on ice maker, see 'Automatic ice maker (freezer only)' section.
	Water supply turned off or not connected.	Connect the water supply.
	Freezer compartment not working.	Contact Customer Care Centre.
	Water pressure too low.	Check water pressure.
	Water line kinked/squashed.	Check water line for kinks/squashing.
	Filter is clogged.	Water filter may need replacing.
	Ice cubes sticking in ice bin.	Remove ice storage bin, loosen cubes and remove clumped ice. Replace ice storage bin.
Ice cubes taste tainted	The food mode is set to 'Soft Freeze'.	Change the food mode from 'Soft Freeze'.
	Unsealed packages may be transmitting odour/taste.	Discard ice cubes and clean ice storage bin. See 'Interior cleaning' section.
		Wrap or cover strong smelling foods.
Slow ice cube freezing	Poor taste from incoming water.	Replace filter cartridge product parts and accessories can be purchased through our Customer Care Centre.
	Door may have been left ajar.	Close door.
Wet ice/ ice clumping	Freezer compartment set too warm.	Turn temperature to a colder setting. See 'Operating instructions' section.
	Low water pressure.	Check water pressure.
Ice is discoloured	Filter is blocked.	Replace filter cartridge, see 'Water filter' section.
	Long freezer door openings.	Gently tap ice to unstick or, if large clumps occur, empty ice bin and make new ice.
	High ambient temperature.	
	Ice bin left out of freezer compartment for a length of time.	
	Ice will stick together over time.	
	Water filter has not been flushed.	Refer to your installation guide supplied with your appliance for details on how to flush your water filter.

EUROPEAN DIRECTIVE 2012/19/EU ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)

EU This appliance is marked according to the European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate handling of this product.

The symbol  marked on the serial plate, or on the documents accompanying the product, indicates that this appliance cannot be treated as household waste. It shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal of the appliance shall be carried out in accordance with the local environment regulations for waste disposal and ensure the refrigerant circuit is not damaged.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or your Fisher & Paykel retailer/dealer from whom you purchased this product.

SERVICE & WARRANTY

For details of your manufacturer’s warranty and contacts for servicing, refer to your separate service and warranty book provided with your appliance.

This product has been designed for use in a normal domestic (residential environment). This product is not designed for any commercial use. Any commercial use by the customer will affect this products manufacturer’s warranty.

Complete and keep for safe reference:

Model	_____
Serial No.	_____
Purchase Date	_____
Purchaser	_____
Dealer	_____
Suburb	_____
Town	_____
Country	_____

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2018. All rights reserved.

The product specifications in this booklet apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these specifications may change at any time. You should therefore check with your Dealer to ensure this booklet correctly describes the product currently available.

NZ AU GB EU

849165B 09.18