

1 2 3 4 5 6 7 8

X08135744

A

A

B

B

C

C

D

D

2431788
干衣机简易快速指南

技术要求

1. 印刷纸张尺寸为350×280 mm，80g双胶纸黑，白印刷，要求内容正确，清楚；
2. 颜色及整体效果必须经过研发部确认后方能生产，产品检验已封样件为准；
3. 未注公差按GB/T 1804-m；
4. 符合Q/HKB J 16001《零部件及原材料中有害化学物质含量规定》要求。

借(通)用件登记

旧底图总号



底图总号

出图审查

日期

1 2 3 4 5 6 7 8

美工稿见下页

 
				80g双胶纸		洗衣机研发部	
				重量	比例	注意标贴	
				1:2			
版本号	A	更改单编号		第1张 共2张		X08135744	
设计	魏爽	2024.8.20	会签				
审核	刘松	2024.8.20	会签				
工艺	冯超	2024.8.20					
标准化	程木聪	2024.8.20	批准	崔维明	2024.8.20	图形识别符号  	

E

F

Brief installation guide to dryer

Control unit

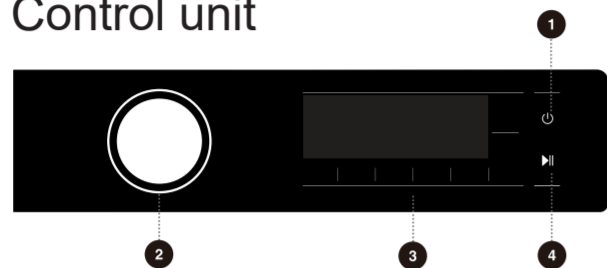

1. Press the Power button. Press and hold for 3 seconds to power off.
2. Select a cycle.
3. Select desired option function.
4. Press Start / Pause.

Wi-Fi connection

1. Open ConnectLife on your smartphone or tablet PC;
2. Bind your device on ConnectLife as follows:
 - A. Click "Start here Add appliances" in "Home" page, or click "Add appliances" in "Devices" page, or click "+".
 - B. Select "Washing Machine" or click "Scan QR/BAR code" or "Manual entry" below.
 - C. Scan the QR/BAR code on the device or enter the AUID/SN manually. If you can not find it, click ? for instructions.
 - D. Click "SET UP APPLICATION"
 - E. Read the instructions, operate the device into the Networking and Binding state, and click "NEXT".
 - F. At this time, the app starts to search for devices, and you can select the device to be connected to the network from the search list; If it is not found, check your bluetooth whether turn on. Bluetooth should be keep it on at all time. And then click "NEXT".
 - G. Select your home Wi-Fi, enter the password, Then click the "CONNECT". The appliance will start networking and binding.
 - H. After binding successfully, you can set the device name and room.
 - I. Now, the device can be control remotely by APP.


***When the " " display light on the display window is not on, you cannot remotely control the machine through the mobile phone. To enable this function, press the " " button on the dashboard.**

 Stacking bracket (optional accessories)


- ◇ The clothes dryer and washing machine can also be fixed with a stacking bracket. For the installation method, please refer to the installation instructions attached to the accessories.
- ◇ Please purchase the optional accessories from the After-sales Department.

Clean the lint and debris filter screen


- ◇ Excessive fluff accumulated on the filter screen will affect the drying effect.
Please clean the filter screen after each use.
- ◇ After cleaning, be sure to reinstall the filter screen in place before use.

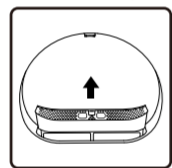

 
1. Open the door and take out the filter screen from the front support.

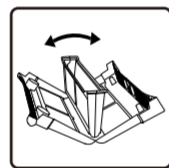

 2. Open the filter screen and clean the fluff of the screen with a wet towel or flowing water.

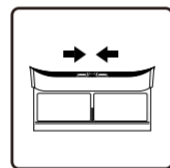

 3. After drying the filter screen, reassemble it.

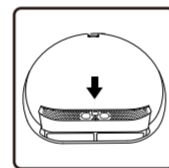

4. Install the filter screen to the front support.

Cleaning of water box

- ◇ If the drain pipe is not installed, the condensate water after drying is stored in the water box. Please drain off it in time after program ends.
- ◇ During running, if the water box is full, on the display flashes for prompt, please empty the water box immediately.
- ◇ The condensate water is not edible.



 
1. Take out the water box horizontally to avoid spllover of condensate water.




2. Dump the condensate water and reinstall the water box in place.

Cleaning of heat exchanger


- ◇ Please clean the heat exchanger regularly, otherwise the performance of the dryer will be affected.

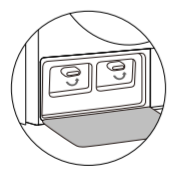

 1. Press the buckle of the heat exchanger door cover at the lower left to open the door cover.

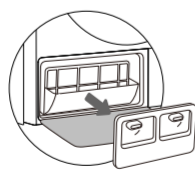

 2. Turn the locking knob of the base filter cover to unlock position.

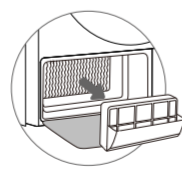

3. Install the cleaned filter and filter cover back to the original positions, lock the knobs and close the heat exchanger door cover.

Troubleshooting

When the machine fails to operate normally, it may not be a fault. Please refer to the following methods for troubleshooting. If the fault still exists after self handling according to the recommended method, please unplug the power supply and contact us for after-sales service. All consequences caused by the maintenance by the user himself or by hiring non-professional after-sales personnel will be borne by the user

Fault phenomenon	Recommended handling method
The dryer cannot be started	<ul style="list-style-type: none"> ◇ Check the power connection; ◇ Confirm the "Start Pause" key is pressed down; ◇ Confirm the door is closed properly; ◇ House fuse is blown, circuit breaker has tripped, or power outage has occurred.
The dryer cannot be started and displays "End"	<ul style="list-style-type: none"> ◇ Check whether the program setting is correct; ◇ Confirm there are clothes in the drum;
Excessive drying time	<ul style="list-style-type: none"> ◇ Check whether the program setting is correct; ◇ Confirm whether there are too many clothes wrapping into clusters; ◇ Check whether the filter screen is cleaned; ◇ There will be air supply for cooling after drying in some programs;
Poor drying effect	<ul style="list-style-type: none"> ◇ Confirm that the clothes have been dehydrated; ◇ Check whether the program setting is correct; ◇ Confirm that there are too many clothes; ◇ Load is not properly sorted. Whether clothes that are not easy to dry are mixed with clothes that are easy to dry; ◇ Large load of heavy fabrics. ◇ Check whether the filter screen is cleaned;
The remaining time of the display stops or jumps	<ul style="list-style-type: none"> ◇ The remaining time varies with clothing type, load, dehydration and ambient temperature, which is a normal phenomenon;
Clothes are wrinkled.	<ul style="list-style-type: none"> ◇ Clothes have dried too long. Try a shorter drying time. ◇ Clothes have been left in the appliance for too long after cycle ends.
The dryer is too loud.	<ul style="list-style-type: none"> ◇ Look for coins, loose buttons, nails, and other objects and remove them immediately. ◇ Check the lint filter. Remove any items stuck inside the lint filter. ◇ Make sure the dryer is level and standing firmly on the floor. ◇ The dryer may hum due to air moving through the drum and fan. This is normal.
Clothes are shrinking.	<ul style="list-style-type: none"> ◇ Garment care instructions are not being followed. Use a low or no heat setting.
Lint is left on clothes.	<ul style="list-style-type: none"> ◇ Lint filter has not been cleaned properly. ◇ Clothes have not been sorted properly. ◇ Some fabrics cause more lint and should be dried separately from fabrics that lint attaches easily. ◇ Tissue, paper, etc., has been left in pockets.
The appliance has an odour.	<ul style="list-style-type: none"> ◇ The smell is caused by rubber material that is attached to the appliance inside. This kind of smell is a rubber's own smell and disappears automatically after using the appliance several times. ◇ When washing the clothes, use the detergent in accordance with the manufacturers recommendations. If you use the detergent excessively not according to the recommendations, undissolved detergent may accumulate on the clothes and cause an odour. ◇ You can smell odours from the clothes if the clothes were left in the appliance after drying or in the washing machine after washing. Unload the clothes promptly at the end of the drying or washing cycle. ◇ Ensure you can smell same odour in the washing machine. If so, clean the tub of the washing machine referring to the washing machine user manual. ◇ Always take care of both lint filters clean. If any residues were left in the lint filter after drying, it may cause odours. And also dry the lint filter completely after cleaning.

If you have any question in use, please contact 1 800 447 367 (AU) or 0800 444 736 (NZ)

2431788-X08135744A