



## Fit Gen 2 Kids Smart Activity Watch

USER MANUAL

# CONTENTS

<b>1.0</b>	<b>GETTING STARTED.....</b>	<b>4</b>
1.1	WHAT'S IN THE BOX.....	4
1.2	WATCH OVERVIEW.....	4
1.3	WATCH CONTROLS.....	4
1.3.1	BUTTON CONTROLS.....	5
1.3.2	GESTURE CONTROLS.....	5
1.3.3	TURNING ON THE WATCH SCREEN.....	6
1.3.4	TURNING OFF THE WATCH SCREEN.....	6
1.4	CHARGING AND POWERING ON.....	6
1.4.1	CHARGING.....	6
1.4.2	POWERING UP THE WATCH.....	7
1.4.3	CHECKING THE BATTERY LEVEL.....	8
1.5	PAIRING AND SETUP.....	8
1.5.1	USING THE WATCH WITHOUT THE APP.....	9
1.5.2	USING THE WATCH WITH THE APP.....	10
1.6	WEAR AND CARE.....	11
<b>2.0</b>	<b>PIXBEE WATCH FEATURES .....</b>	<b>12</b>
2.1	DATE AND TIME SETTINGS.....	12
2.2	WATCH APPLICATIONS LIST .....	12
2.3	SETTINGS.....	13
2.3.1	WATCH FACE OPTIONS.....	13
2.3.2	SETTING DISPLAY BRIGHTNESS.....	13
2.3.3	SETTING SCREEN-ON DURATION .....	13
2.3.4	SETTING VIBRATION STRENGTH.....	13
2.3.5	SETTING USER PROFILE AND PREFERENCE.....	14
2.3.6	POWERING OFF, RESTARTING AND RESETTING.....	14
2.3.7	VIEWING PRODUCT INFORMATION AND MAC ADDRESS.....	15
2.3.8	ACCESSING HELP .....	15
2.4	DAILY ACTIVITIES.....	15
2.4.1	SETTING DAILY GOAL .....	15
2.4.2	VIEWING ACTIVITY RECORD.....	16

2.4.3	SETTING WALK REMINDER .....	16
2.4.4	SETTING DRINK REMINDER .....	17
2.4.5	SETTING HAND WASH REMINDER .....	17
2.5	HABIT-BUILDING REMINDER.....	18
2.6	WORKOUT.....	19
2.6.1	STARTING AND ENDING A WORKOUT .....	19
2.6.2	WORKOUT RECORDS.....	19
2.7	HEART RATE.....	20
2.7.1	HEART RATE MEASUREMENT .....	20
2.7.2	VIEWING HEART RATE.....	20
2.8	SLEEP MONITORING .....	20
2.9	ALARM.....	21
2.10	STOPWATCH.....	22
2.11	TIMER.....	22
2.12	GAMES .....	22
2.13	MAGIC PET.....	23
<b>3.0</b>	<b>RYZE CONNECT APP.....</b>	<b>23</b>
3.1	SYNCING WITH THE WATCH .....	23
3.2	UPDATING THE WATCH.....	23
3.3	DISCONNECTING THE WATCH.....	24
3.4	FAMILY MEMBER DEVICE MANAGEMENT .....	24
3.5	THIRD-PARTY APPS SUPPORT .....	25
3.5.1	SHARING DATA WITH STRAVA .....	25
3.5.2	SHARING DATA WITH HEALTH CONNECT .....	25
3.5.3	SHARING DATA WITH APPLE HEALTH .....	25
3.6	VIRTUAL MEDAL AWARDS .....	25
3.7	UPDATING THE APP.....	25
3.8	USER PROFILE SETTINGS.....	25
3.9	PREFERENCE SETTINGS .....	26
3.10	ACCOUNT SETTINGS.....	26
3.11	DATA PRIVACY AND SECURITY .....	26
3.12	SIGNING OUT .....	26

<b>4.0</b>	<b>SPECIFICATIONS.....</b>	<b>27</b>
<b>5.0</b>	<b>SAFETY AND HANDLING .....</b>	<b>27</b>
<b>6.0</b>	<b>WARRANTY TERMS AND CONDITIONS.....</b>	<b>29</b>
6.1	INDEMNITY.....	30
6.2	WARRANTY AND WARRANTY DISCLAIMER.....	30
6.3	LIMITATIONS OF LIABILITY.....	32
<b>7.0</b>	<b>NOTES .....</b>	<b>33</b>

## 1.0 GETTING STARTED

Thank you for your purchase. Please read this user manual carefully before using the smart watch and retain this user manual for future reference.

### CAUTION

The Pixbee Fit Gen 2 Smart Activity Watch is not a medical or therapeutic device. Any data or information provided should not be used for medical diagnosis and/or treatment, and monitoring or preventing other medical health issues. Always consult your doctor for health and medical advice.

## 1.1 WHAT'S IN THE BOX

1 x Pixbee Fit Gen 2 Smart Activity Watch, 1 x Magnetic Charging Cable, 1 x User Manual

## 1.2 WATCH OVERVIEW



## 1.3 WATCH CONTROLS


Pixbee Fit Gen 2 has a touch screen that supports operations including short tap, long press, and swipe up/down, a touch key that supports short tap and a side button that supports press operation.

### 1.3.1 BUTTON CONTROLS

OPERATION	FUNCTION	NOTE
<b>Short Press</b> Touch key	<ul style="list-style-type: none"><li>To return to the home screen.</li></ul>	
<b>Short Press</b> Side button	<ul style="list-style-type: none"><li>To wake up the screen when it is off.</li><li>To return to the previous menu screen.</li><li>To open the pause/resume screen when a workout session is in progress.</li></ul>	
<b>Press and Hold</b> Side button	<ul style="list-style-type: none"><li>To power up the watch.</li><li>To end a workout session in progress.</li><li>To force restart on the watch, press and hold the button for at least 8 seconds.</li></ul>	Please fully charge the smart watch before first use.

### 1.3.2 GESTURE CONTROLS

The following diagram outlines the various gesture controls you can make from the watch's home screen to access the applications list. You can edit the applications list via the **Edit** feature.

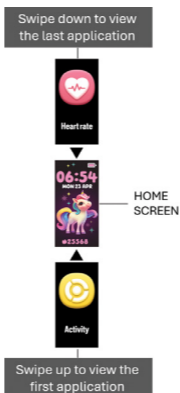


OPERATION	FUNCTION
Swipe up	<ul style="list-style-type: none"> <li>To navigate a list and view further screen details.</li> <li>To view workout data during a workout session.</li> </ul>
Swipe down	<ul style="list-style-type: none"> <li>To navigate a list and view further screen details.</li> <li>To view workout data during a workout session.</li> </ul>
Tap	<ul style="list-style-type: none"> <li>To confirm a screen selection.</li> <li>To enter the sub-menu and view details.</li> </ul>
Tap and hold	<ul style="list-style-type: none"> <li>To view options and edit watch face from the home screen.</li> </ul>

### 1.3.3 TURNING ON THE WATCH SCREEN

- Press the side button on the watch.
- Raise and rotate your wrist inwards.

### 1.3.4 TURNING OFF THE WATCH SCREEN

The watch supports screen auto-off feature. To edit the timer setting, swipe up/down on the watch's home screen and tap the **Settings** icon. Tap **Screen time off**. Swipe up/down to select a duration and tap  to confirm your selection.

## 1.4 CHARGING AND POWERING ON

### 1.4.1 CHARGING

Please fully charge the smart watch before first use.

NOTE
Compatible charging cable for replacement: <b>RZ-WZCAG</b> (USB-C end) or <b>RZ-FLEXCBL</b> (USB-A end)



## CHARGING INSTRUCTIONS

1. Align and attach the supplied magnetic charging cable to the magnetic contacts at the back of the watch.
2. Connect the other end of the magnetic-charging cable to a USB port of a computer, or a standard adaptor with a DC output voltage of 5V and an output current not exceeding 0.5A, that complies with safety standards as well as national and local laws and regulations.
3. The charging icon will appear on the watch screen after a short while. The charging indicator will display 100% when the watch is fully charged. The watch and charger may become slightly warm during charging. Detach the watch from the magnetic charging cable once it is fully charged and allow the watch to cool down.

### **⚠ CAUTION**

- Use only a manufacturer recommended magnetic-charging cable for charging.
- Before charging, wipe clean the charging contact pins on the watch with a clean, dry cloth to remove any residual sweat or moisture.
- To prevent short circuits, keep the magnetic-charging contacts and charging port dry and clean and away from conductive materials such as metal powders, pencil leads and liquids.
- Do not use the watch whilst charging. Allow the watch to cool down completely before wearing.
- Keep the smart watch and charging cable away from strong magnetic fields and objects such as magnetic stripe cards, credit cards, phone cards, passbooks and microwaves to protect its performance.
- Do not expose the smart watch and charging cable to high temperatures for prolonged periods.

### 1.4.2 POWERING UP THE WATCH

Follow these methods to power up the watch:

1. Before initial use, fully charge the watch. The watch screen will turn on after a short while.
2. Press and hold the side button until the watch start-up screen appears.

#### NOTE

If the watch cannot be powered up after a period of inactivity, it needs to be charged for a few minutes until the watch screen appears and displays the charging status.

### 1.4.3 CHECKING THE BATTERY LEVEL


There are three ways to check the battery level on the smart watch.

1. Charge the watch and check the battery level on the charging screen.



2. View the battery level on a watch face that displays the battery level.
3. View the battery level in the **Device** menu of the **Ryze Connect** app.

You will receive an alert from the watch reminding you to charge it when the battery runs too low.




### 1.5 PAIRING AND SETUP

The Pixbee Fit Gen 2 Smart Watch can be set up with or without its companion app. Certain features are not accessible when the watch is used in the standalone mode.


### 1.5.1 USING THE WATCH WITHOUT THE APP

Follow the steps below.


1. Fully charge to activate and turn on the watch. Then follow screen prompts to complete setup.
2. To confirm using the watch in the standalone mode, tap arrow button in the screen as shown below and proceed to the next setting.



3. Tap or swipe up/down the screen options to edit your selection for unit of measurement, as well as user-profile data such as gender, age, height and weight. Tap the arrow button to confirm selection and proceed to the next step. The smart watch utilises user-profile to improve accuracy of the measured activities. Whilst using the watch in the standalone mode, you can edit the user profile later in **Settings**.

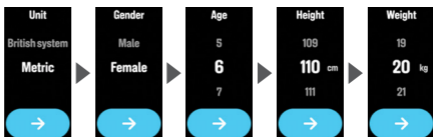

4. Tap or swipe up/down the screen options to edit date, time format and time settings. Whilst using the watch in the standalone mode, you can edit the date and time later in **Settings**.



## NOTE

To access more watch face options, edit step goal, set up habit-building reminders, upload daily data and update watch software, you must pair and connect the watch with the **Ryze Connect** app.

### 1.5.2 USING THE WATCH WITH THE APP

With the **Ryze Connect** app installed on your smartphone, you can set up, manage and access the full features of the watch. The app is compatible for use with iPhones using iOS 9.0 or later, and with Android smartphones using Android 6.0 or later.

Follow the steps below to complete watch setup and pairing (binding) with the app.

1. Fully charge to activate and turn on the watch.
2. To confirm using the watch in the pairing mode with the app, swipe left on the first watch screen until you reach the screen with QR code for pairing.



3. Go to your smartphone, and enable Bluetooth and Location services on the phone.
4. Download the **Ryze Connect** app from the iOS App Store or the Google Play Store. Alternatively, you can scan the QR code below to download the App.



## NOTE

If you have already installed the app on your smartphone, check that it is the latest version. If necessary, update the app through the Google Play Store or the iOS App Store.

5. Open the **Ryze Connect** app.  
If you already have a **Ryze Connect** account, log in to your account. If you do not have a Ryze Connect account, tap the **Login** button, and follow the prompts to register a new account. Follow the on-screen instructions to grant permissions when prompted.
6. Pair and connect with the watch.  
Go to the **Device** menu in the app and tap the **+** sign. The app will then automatically search for devices to connect. Tap and select Pixbee Fit G2 to connect. Otherwise, tap the **[-]** sign at top of the app screen, then scan the QR code on the watch with your phone camera.
7. Complete the setup by following the on-screen instructions in the app. Once the setup is complete, read through the user manual to learn more about the watch and how to manage its functions and features with the app.

#### NOTE

If your Pixbee Fit Gen 2 Smart Activity Watch is currently connected to a smartphone and you would like to pair it to a new smartphone, first reset the watch then turn off the Bluetooth of your connected smartphone.

## 1.6 WEAR AND CARE



The watch should rest a finger's width below your wrist bone. The back of the watch should be slightly in contact with your skin. Keep the watch secure on your wrist during a workout.

To avoid discomfort, do not overtighten the watch on your wrist. Take it off from time to time.

The watch has a IP68 dustproof and 3ATM waterproof rating. It can be worn in cold-water showers, shallow waters, indoor pools and swimming near the shoreline.

#### NOTE

Do not use the watch in spas, hot springs, deep dives or any high-temperature, high-humidity environment.

### CAUTION

- If you find the watch particularly uncomfortable to wear, please adjust the strap accordingly for a better fit or take it off.
- Clean and dry the watch and its strap after heavy workouts or if the watch has been exposed to sweat or fresh water. Wearing dirty and wet watch straps can cause skin irritations.
- Some users may experience skin irritation after prolonged use of the watch, especially if you have sensitive skin or allergies. If you experience any skin irritation, please stop wearing the smart watch.
- If necessary, use only soap-free cleanser to clean the watch and let it dry completely. Chemical cleaners and solvents can damage plastic components and finishes.

## 2.0 PIXBEE WATCH FEATURES

### 2.1 DATE AND TIME SETTINGS

When the smart watch is connected to the **Ryze Connect** app, the date and time settings are automatically updated.



If you use the smart watch in the standalone mode without the app, you can adjust the date and time settings on the watch. Swipe up/down on watch's home screen and tap the **Settings** icon. Tap **Time**. Use screen swipe to view options and screen tap to confirm selection for your settings.

### 2.2 WATCH APPLICATIONS LIST

You browse through the watch applications list when you swipe up/down from the watch's home screen. You can edit the list to hide or add an application and rearrange the order of applications.

The last application on the editable list appears first above the watch home screen.

#### **Managing applications with the smart watch**

Swipe up/down on the watch's home screen and tap the **Edit** icon. Tap the red - sign next to an application to remove it from the list. Tap the  icon next to an application to move it to a new position in the list. To add applications to the list, tap the + button found at the bottom of the list. Tap the circle next to an application icon and tap  to confirm your selection.

## 2.3 SETTINGS

### 2.3.1 WATCH FACE OPTIONS

Within the **Ryze Connect** app, you will find a **Watch Face Market** that features a collection of watch faces to choose from.

#### Changing the watch face with your smart watch

##### Method 1:

To view watch faces stored on the watch, tap and hold the home screen for about 2 seconds. Then swipe up/down to view the collection. Tap on a watch face of your choice to confirm your selection.

##### Method 2:

Swipe up/down on the watch's home screen and tap the **Settings** icon. Tap **Watch faces**. Then swipe up/down to view the collection. Tap on a watch face of your choice to confirm your selection.

#### Changing the watch face with the Ryze Connect App


Open the **Ryze Connect** app and go to the **Device** tab. Locate the **Watch Face Market** and tap on **More** to show the various watch face designs. Tap on your selected design and then tap **Add and Install**. The installation will sync with your smart watch and the new watch face will appear on your watch.

You can also choose your own images to use as a watch face. Tap on **Watch Face Market**. Then select **Photo**. Follow the prompts and tap **Install**.


### 2.3.2 SETTING DISPLAY BRIGHTNESS

Swipe up/down on the watch's home screen and tap the **Settings icon**. Tap **Screen brightness**. Swipe up/down on the sliding bar to adjust the screen brightness. Tap the touch key to return to home screen.

### 2.3.3 SETTING SCREEN-ON DURATION

Swipe up/down on the watch's home screen and tap the **Settings** icon. Tap **Screen time off**. Swipe up/down to select a duration and tap  to confirm your selection.

### 2.3.4 SETTING VIBRATION STRENGTH


Swipe up/down on the watch's home screen and tap the **Settings** icon. Tap **Vibration strength**. Swipe up/down to switch settings. Tap  to confirm your selection.

### 2.3.5 SETTING USER PROFILE AND PREFERENCE

The watch allows you to set your preferred measurement system, and uses the user profile data such as gender, age, height and weight to improve accuracy of the measured activities.

#### Changing user profile and preference with your watch

Whilst using the watch in the standalone mode (without pairing to app), you can edit the user preference and profile via the watch.

To make changes, swipe up/down on the watch's home screen and tap the **Settings** icon. Tap **Personal information**. Swipe up/down to view all editable fields, and tap to select a field. Use screen tap and swipe operations to adjust the variable, and tap  to confirm your selection.

#### Changing user profile and preference with the Ryze Connect app.

If you use the watch with the app, changes to the user profile can be made by opening the app and go to **Me** tab. Tap on **User Profile Image** at the upper left corner. You can edit the username, user profile image and profile settings. Tap **<** to save changes made.

To change the preference settings, open the app and go to **Me** tab. Tap **Settings**. Tap **Preferences**. Adjust your preferences for measurement units and time formats. Tap **<** to save the settings.


### 2.3.6 POWERING OFF, RESTARTING AND RESETTING

#### Powering off the smart watch

Swipe up/down on the home screen, tap the **Settings** icon. Tap **Power off** and tap  to confirm selection.

Restarting the smart watch

#### Method 1:

Swipe down on the home screen, tap the **Settings** icon. Tap **Restart** and tap  to confirm selection.

#### Method 2:

Open the app and go to the **Device** tab. Tap the watch icon. In the following screen, tap **Restart device** and follow the prompts to confirm selection.

### Method 3: Force restarting the watch

From the watch's home screen, press and hold the side button for at least 8 seconds and release the button after the screen turns off. The smart watch will automatically restart, and the home screen will appear after a short while.

### Resetting the watch

#### NOTE

Once the watch is reset, it will restore to its factory settings and all existing data will be deleted. The watch will also be unpaired from your smartphone.

#### Method 1:

Swipe up/down on the home screen, tap the **Settings** icon. Tap **Reset** and tap  to confirm selection.

#### Method 2:

Open the app and go to the **Device** tab. Tap the watch icon. In the following screen, tap **Reset device** and follow the prompts to confirm selection.

## 2.3.7 VIEWING PRODUCT INFORMATION AND MAC ADDRESS

Swipe up/down on the home screen, tap the **Settings** icon. Tap **About** to view the MAC address and watch product information.

## 2.3.8 ACCESSING HELP


Swipe up/down on the home screen, tap the **Help** icon. Scan the QR code with your smartphone to access help from Pixbee website.

## 2.4 DAILY ACTIVITIES

The amount of daily activities that you undertake can contribute to your overall fitness and health. Your smart watch monitors your daily activities, such as tracking your steps, activity calories, and walking distance. It can track all these parameters automatically.

### 2.4.1 SETTING DAILY GOAL


#### Setting a daily goal for steps with the Ryze Connect app

Open the app. Go to the **Me** tab. Tap **Settings**. Tap **My Goals**. In the following screen, slide the bar to set your **Steps Goal**. Tap  in the upper right (if present), then tap **<** to save the setting and sync the step goal to the watch.


## 2.4.2 VIEWING ACTIVITY RECORD

### Viewing activity records on the watch

Swipe up/down on the home screen, tap the **Activity** icon. Swipe screen to reveal all data. Use the app to set the daily goal for steps.



### Viewing activity records in the Ryze Connect App

The app allows you to upload health, exercise and fitness data from a connected smart watch and enables easy viewing of historical statistics. Sync the connected watch data to the app regularly. Open the app, go to **Home** tab, swipe down the middle of the phone screen and release your finger when you see  to synchronise.

**Method 1:** Go to **Home** tab. Tap the fitness tricolour ring tab to review statistics on activity.

**Method 2:** Go to **Me** tab. Tap **My Data**. Tap to view activity data, health data and workout records.

**Method 3:** To view weekly health reports, go to **Me** tab. Tap **Health Report**. Tap a report to view details.

## 2.4.3 SETTING WALK REMINDER

### Setting up a walk reminder with your watch

Set yourself a reminder to get up and walk around at the 50-minute mark of every hour to reach your daily steps goal.



Open the app and ensure that your smart watch is paired to the app. Go to the **Device** tab and tap **Health**. Tap **Walk-Around Reminder**. In the following screen, turn on the switch and set the timing, an hourly steps goal or a repeat cycle. Tap < to save the settings.

#### 2.4.4 SETTING DRINK REMINDER

##### Setting up a drink reminder with your watch

Set yourself a reminder to drink water at set intervals to keep yourself hydrated and healthy.




Open the app and ensure that your watch is paired to the App. Go to the **Device** tab and tap **Health**. Tap **Drinking Reminder**. In the following screen, turn on the switch and set the timing and repeat cycle. Tap < at the upper left to save the settings.

#### 2.4.5 SETTING HAND WASH REMINDER

##### Setting up a hand wash reminder with your watch

Open the app and ensure that your watch is paired to the app. Go to the **Device** tab and tap **Health**. Tap **Wash-Your-Hand Reminder**. In the following screen, turn on the switch to set the timing or a repeat cycle. Tap ✓ at the upper right to save the settings.



## 2.5 HABIT-BUILDING REMINDER


This smart watch supports a **Habit formation** reminder application. Set up a reminder and receive an alert from your watch.



### Adding a reminder via the Ryze Connect App

Open the Ryze Connect app and go to the **Device** tab. Tap **Habit Formation**. Tap **Add**. Follow the on-screen instructions and complete the details, time and repeat cycle settings. Tap **Done** to save the setting. Tap **<** to return to the **Device** tab. Return to the **Home** tab and swipe screen to synchronise the setting with the smart watch.

### Deleting a reminder via the Ryze Connect app


Open the **Ryze Connect** app and go to the **Device** tab. Tap **Habit Formation**. Tap  on the upper right. Tap **View habits**. Tap and select a reminder. Tap **Delete** (Disable) button.

## 2.6 WORKOUT

The **Workout** application on the smart watch allows you to manage individual workout sessions. The watch can track your workout session and provides a workout summary once the session is ended. You can review the workout history on the watch via **Workout records** and on your smartphone using the **Ryze Connect** app.

### 2.6.1 STARTING AND ENDING A WORKOUT

#### Starting and ending a workout with the smart watch

1. Swipe up/down on the home screen, and tap **Workout**. Swipe the screen to identify an exercise from the workout list.
2. To start a workout session, tap the workout name.
3. During a workout session, you can do the following:
  - Swipe the screen up/down to view workout data which vary by workout mode.
  - Press the side button to pause workout, and reveal the stop/resume control screen. Tap  to resume the workout. Tap **X** to end the workout.
  - Press and hold the side button to end the workout session.


A workout summary is displayed after the session has ended.

### 2.6.2 WORKOUT RECORDS

#### Viewing workout records with the watch

Swipe up/down on the home screen, and tap **Workout**. Tap **Workout records**. Swipe the screen, and tap a completed workout to reveal data for that workout session. Swipe screen to view all data.

#### Viewing workout records with the Ryze Connect App


Sync the connected watch data to the app regularly. Open the **Home** tab, swipe down the middle of the phone screen and release your finger when you see  to synchronise.

#### Method 1:

Go to the **Home** tab. Tap **Exercise** to view training records. If the **Exercise** card is not visible, tap **Edit Card** at the bottom of the screen to add the tile.

## 2.7 HEART RATE

The watch supports measurement of your heart rate. Measured heart rate is presented in Beats Per Minute (BPM). To ensure accuracy of measurement, wear the smart watch at least one finger above your wrist bone and make sure it is snug on your wrist. During the measurement, keep your arm and wrist still and wait patiently until the measurement finishes.

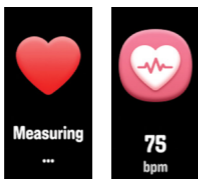

### 2.7.1 HEART RATE MEASUREMENT

Swipe up/down the home screen, and tap the **Heart rate** icon. Wait patiently until the measurement finishes. A constant heart rate value will be displayed when the measurement is complete.

### 2.7.2 VIEWING HEART RATE

See below the methods for checking heart rate on the app.

1. Open the **Heart Rate** application on the watch. Wait for measurement to complete.
2. View the **Heart Rate** card in the **Home** tab in the **Ryze Connect** app. Sync the watch data to the app by swiping down the phone screen whilst at the **Home** tab. Tap the card to view more analysis.

## 2.8 SLEEP MONITORING


To monitor sleep quality, wear the watch while you are sleeping. The watch provides several methods to check sleep quality.

1. Swipe up/down on home screen, and tap the **Sleep** icon to view sleep data.
2. View the **Sleep Cycle** card in the **Home** tab in the **Ryze Connect** App. Sync the smart watch data to the app by swiping down the phone screen whilst in the **Home** tab. Tap the card to view more detail. The sleep analysis provides a Sleep Score that indicates your sleep quality. The higher the Sleep Score, the better your sleep.


## 2.9 ALARM

### Setting an alarm with the watch

1. Swipe up/down the home screen, and tap the **Clock** icon. Tap **Alarm**. Tap **+** to set a new alarm. Swipe the screen up/down to select the Hour and Minute setting, and tap **✓** to save the time setting. In the days-setting screen, tap the circle next to a weekday to select it, tap **✓** at the screen bottom to save the setting. The alarm will activate once if no repeat cycle is set.

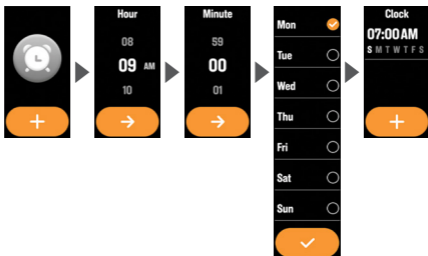

2. To edit an alarm, tap to select it. Tap **Open**, then tap **✓** to open the editing screen. Make the changes accordingly. To delete an alarm, tap to select it. Tap **Delete**.






#### NOTE

A maximum of 10 alarms can be set.

## 2.10 STOPWATCH






The watch has a stopwatch application.


1. Swipe up/down the home screen, and tap the **Clock** icon. Swipe screen, and tap **Stopwatch**.
2. Tap  to start or resume the stopwatch. Tap  to stop the stopwatch. Tap  to reset the stopwatch.



## 2.11 TIMER


The watch has a timer application.

1. Swipe up/down the home screen, and tap the **Clock** icon. Swipe screen, and tap **Timer**.
2. Swipe screen to change the Hour setting, and tap . Swipe screen to change the Minute setting, and tap  to confirm. Tap  to start/resume the countdown. Tap  to pause the countdown. Tap  to reset the timer.

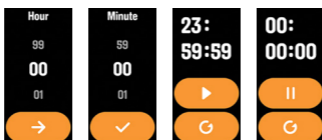

## 2.12 GAMES


The watch features three mini game applications.

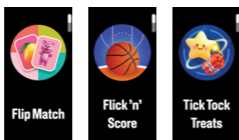

Swipe up/down on the watch's home screen, and tap **Games**. Swipe and tap a game to start playing. During game play, use screen-tap or screen swipe to progress the game. Press the side button to pause, resume or exit game.

## 2.13 MAGIC PET

The watch features a **Magic pet** application.

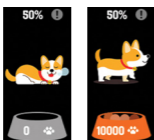

Keep your special pet fed and full of playful energy by tapping the bowl to magically exchange your daily steps into yummy food.


## 3.0 RYZE CONNECT APP

The Ryze Connect App is a free app that allows you to manage and control various features of the watch from your smartphone. The app supports watch settings, data updates, synchronisation, analysis, reporting and sharing with selected third-party apps.

For the best user experience, it is recommended that you connect your smart watch to the app regularly.

From time to time, we will add improvements to the watch and enhance app functionality. For the latest updates on our products, including this manual, please visit [www.pixbee.com.au](http://www.pixbee.com.au) and [www.pixbee.co.nz](http://www.pixbee.co.nz)

### 3.1 SYNCING WITH THE WATCH

Open the Ryze Connect App and go to the **Device** tab and check that the watch is connected. Go to the **Home** tab. To sync watch data with the app, swipe down the middle of the phone screen and release your finger when you see  to synchronise.

### 3.2 UPDATING THE WATCH

You should check the app regularly for software updates with the watch. Here's how:

1. Ensure that the watch battery level is more than 40%. If not, please recharge the watch.
2. Keep your smart watch and smartphone close to each other and ensure that they remain stationary.
3. Open the Ryze Connect App and go to the **Device** tab. Ensure that your smartphone and smart watch are connected via Bluetooth. Tap on the watch's thumbnail image. In the following screen, tap **Device Update**. Follow the prompt to complete installation. The updating process may take up to a few minutes to complete.

### 3.3 DISCONNECTING THE WATCH

Open the Ryze Connect App and go to the **Device** tab. Tap on the watch's thumbnail image. Tap **Delete Device** and follow the prompt to confirm the action.

### 3.4 FAMILY MEMBER DEVICE MANAGEMENT

Through the Ryze Connect App, you can conveniently manage the smart watches of family members to set goals, and monitor each family member's health, and fitness activities from one location and device.

#### Creating a family account

Open the Ryze Connect App and go to the **Device** tab. Tap **+** at the upper right. Along the top of screen, tap **+** below **Family member**. Tap **Create Family Member's Account**. Follow the prompts and fill in the required information. When prompted, select **I Have read and Agree User and Privacy Policy**. Select **Create**. Select **I Agree**. Follow the prompts to complete user settings. Select **Finish**.

#### Pairing a device to a family account

Open the Ryze Connect App. Bring the smart watch that you wish to pair close to your smartphone. Go to the **Device** tab. Tap **+** at the upper right. In the following screen, tap on a family member icon along the top. Tap a device to connect in the found list. Follow the prompt instruction and select **Finish** to complete pairing.

#### Viewing and managing a family member device

You can view and manage the connected device of a family member using the family account with the Ryze Connect App.

Bring the connected smart watch close to your smartphone. Open the app and go to the **Home** tab. Tap **My Family** and then tap on a family account.

To sync data with the connected smart watch, swipe down on the screen.

To adjust settings for the connected device, tap on the **Device** icon.

To view workout records and more reporting, tap on an activity card.

To manage fitness goal for the connected smart watch, scroll down and tap **Set fitness goals**.

### 3.5 THIRD-PARTY APPS SUPPORT

The **Ryze Connect** App supports data sharing with selected third-party Apps.

#### 3.5.1 SHARING DATA WITH STRAVA

To authorise and enable data sharing, open the app. Go to **Me** tab. Tap **Data Sharing and Authorisation**. Tap **Strava**. Follow the prompts to complete the process.

#### 3.5.2 SHARING DATA WITH HEALTH CONNECT

To authorise and enable data sharing, open the app. Go to **Me** tab. Tap **Data Sharing and Authorisation**. Tap **Health Connect**. Follow the prompts to complete the process.

<b>NOTE</b>
Data sharing with Health Connect is only possible on smart devices running on Android systems.

#### 3.5.3 SHARING DATA WITH APPLE HEALTH

To authorise and enable data sharing, open the app. Go to **Me** tab. Tap **Data Sharing and Authorisation**. Tap **Apple Health**. Follow the prompts to complete the process.

<b>NOTE</b>
Data sharing with Apple Health is only possible on smart devices running on iOS systems.

### 3.6 VIRTUAL MEDAL AWARDS

Keep yourself motivated and incentivised towards personal fitness goals by winning virtual medals after completing various achievements. To review virtual medals, open the app and go to **Me** tab. Tap on **My Medals**.

### 3.7 UPDATING THE APP

Open the Ryze Connect App. Go to **Me** tab. Tap **Check for Updates**. Follow the prompts to complete the updating process.

### 3.8 USER PROFILE SETTINGS

The watch utilises user profile information including gender, age, height and weight recorded in the Ryze Connect App to improve accuracy of the measured data.

To make changes to the user profile, open the app and go to **Me** tab. Tap on **User Profile Image** at the upper left corner. You can edit the username, user profile image and profile settings. Tap < to save changes made.

### 3.9 PREFERENCE SETTINGS

To change the preference settings, open the Ryze Connect App. Go to **Me** tab. Tap **Settings**. Tap **Preferences**. Adjust your preferences for measurement units and date and time formats. Tap < to save the settings.

### 3.10 ACCOUNT SETTINGS

#### Changing email account

Open the Ryze Connect App. Go to **Me** tab. Tap **Settings**. Tap **Modify Email**. Follow the prompts to change the email account.

#### Changing account password

Open the Ryze Connect App. Go to **Me** tab. Tap **Settings**. Tap **Change Password**. Follow the prompts to change the account password.

#### Cancelling account

Open the Ryze Connect App. Go to **Me** tab. Tap **Settings**. Tap **Cancel Account**. Follow the prompts to cancel the account.

### 3.11 DATA PRIVACY AND SECURITY

You can control how your data is shared to the cloud.

To clear personal data that is stored in the cloud, go to **Me** tab. Tap on **Settings**. Tap on **Privacy and Security**. Tap **Clear Personal Data on the Cloud**.

To stop data syncing to the cloud, go to **Me** tab. Tap on **Settings**. Tap on **Privacy and Security**. Turn off the switch for each displayed item.

### 3.12 SIGNING OUT

In the App go to **Me** tab. Tap **Settings**. Tap **Sign Out**.

## 4.0 SPECIFICATIONS

<b>Display</b>	0.95-inch AMOLED
<b>Display Resolution</b>	120 x 240
<b>Battery Capacity</b>	88mAh
<b>Rated Input</b>	5V= 0.5A
<b>Charging Time</b>	Approximately 2 hours for a full charge
<b>Battery Life*</b>	5 to 7 days
<b>Ingress Protection</b>	IP68, 3ATM
<b>Wireless Connectivity</b>	Bluetooth 5.2 BLE
<b>Bluetooth Frequency</b>	2402MHz – 2480MHz
<b>Watch Dimension</b>	210mm(L) x 22.1mm (W) x 13.75mm (T) (including straps and protrusions)
<b>Wrist Circumference</b>	123mm – 165mm
<b>Compatibility</b>	Android 6.0 and iOS 9 versions and above
<b>Operating Temperature</b>	-10°C to 40°C
<b>Charging Temperature</b>	0°C to 40°C

\*Useful battery life will be shortened with more frequent use of continuous heart rate monitoring, screen activation, vibration notification, data sync to the app and other functions.

## 5.0 SAFETY AND HANDLING

### ⚠ WARNING

Failure to follow safety instructions could result in fire, electric shock, injury or damage to your watch or other properties and invalidate warranty.

- The Pixbee Fit Gen 2 is not intended for medical use. Any data or information provided should not be used for the diagnosis, treatment, and monitoring, or prevention of other health conditions. Always consult your doctor for health and medical advice.
- To prevent watch failure: Do not place the watch and its accessories near extreme temperatures.

- Do not use the watch in saunas, hot springs, deep dives or high temperatures and high humidity environments.
- To prevent damage, do not subject the watch and its accessories to sharp objects, impact and shock.
- To avoid damage and injury, do not attempt to disassemble, modify or repair the watch or its accessories.
- Before charging, use a clean cloth to wipe, clean and remove any residual sweat or moisture on the watch contact pins.
- To prevent short circuits, keep the magnetic charging contacts and charging port dry, clean and away from conductive materials such as metal powders, pencil leads and liquids.
- Charge the watch with a manufacturer recommended charging cable for Pixbee Fit Gen 2, a USB port of a computer, or a third-party power adaptor that is fully compliant with USB 2.0 or later and with applicable safety standards, national and local laws and regulations.
- Do not use the watch whilst charging. The watch and power adaptor will become warm when charging. Sustained contact with warm surfaces for long periods of time may cause discomfort or injury. Allow the watch to cool down completely before wearing it.
- To protect the watch's performance, keep it away from strong magnetic fields and objects such as magnetic stripe cards, credit cards, phone cards, passbooks and microwaves.
- Do not expose the watch and charging cable to high temperatures for a prolonged period.
- If you find the watch particularly uncomfortable, please adjust the watch strap or remove it.
- Clean and dry the watch if exposed to fresh water, perspiration after workouts, or heavy sweating. Wearing dirty, wet straps can cause skin irritations.
- Some users may experience skin irritation after prolonged use of the watch, especially if one has sensitive skin or allergies. If you experience any skin irritation, please stop wearing the watch.

- If necessary, use only soap-free cleanser to clean the watch and let it dry completely. Chemical cleaners and solvents can damage plastic components and finishes.

## 6.0 WARRANTY TERMS AND CONDITIONS

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is provided in addition to your rights under the Australian Consumer Law. Directed Electronics Australia Pty Ltd (Directed Electronics) warrants that this product is free from defects in material and workmanship for a period of 12 months from the date of purchase or for the period stated on the packaging. This warranty is only valid where you have used the product in accordance with any recommendations or instructions provided by Directed Electronics.

This warranty excludes defects resulting from alterations of the product, accident, misuse, abuse or neglect. To claim the warranty, you must return the product to the retailer from which it was purchased or if that retailer is part of a National network, a store within that chain, along with satisfactory proof of purchase. The retailer will then return the goods to Directed Electronics.

Directed Electronics will repair, replace or refurbish the product at its discretion. The retailer will contact you when the product is ready for collection. You will bear all costs involved in claiming this warranty, including the cost of the retailer sending the product to Directed Electronics.

**Please scan this QR code for customer support:**



## **6.1 INDEMNITY**

You agree to defend, indemnify and hold harmless Pixbee and its subsidiaries and affiliates from and against any and all claims, proceedings, injuries, liabilities, losses, costs and expenses (including reasonable legal fees), including but not limited to, claims alleging negligence, invasion of privacy, copyright infringement and/or trademark infringement against Pixbee and its subsidiaries and affiliates, relating to or arising out of your breach of any provision of these terms, your misuse of Pixbee products or its services, or your unauthorized modification or alteration of products or software.

## **6.2 WARRANTY AND WARRANTY DISCLAIMER**

Pixbee has a limited warranty, whereby Pixbee warrants to you and only to you that this Pixbee product will be free from defects in materials and workmanship for one (1) year from the date of your purchase (unless a longer warranty period is required by law). The specifics of this Pixbee limited warranty are covered in this manual.

To the extent possible under governing law, other than the above product warranty for the Pixbee product you understand and agree that the Pixbee services are provided on an "as is" and "as available" basis.

Pixbee makes no warranty that the Pixbee product and services will meet your requirements or that use of the Pixbee services will be uninterrupted, timely, secure or error-free. Nor does Pixbee make any warranty as to the accuracy or reliability of any information obtained through Pixbee (including third party content), that any defects in the Pixbee products or services be corrected or that the Pixbee products or Pixbee services will be compatible with any other specific hardware or service.

Further, Pixbee does not warrant that Pixbee products or services or Pixbee servers that provide you with data and content are free of viruses or other harmful components.

Pixbee also assumes no responsibility for and shall not be liable, for any damages caused by viruses that may infect your Pixbee. In the event of any loss, damage or injury, you will not look to Pixbee to compensate you or anyone else. You release and waive for yourself and your insurer all subrogation and other rights to recover against Pixbee arising as a result of the payment of any claim for loss, damage or injury.

Pixbee equipment and services do not cause and cannot eliminate occurrences of certain events, including, but not limited to fires, floods, burglaries, robberies and medical problems. Pixbee makes no guarantee or warranty, including any implied warranty of merchantability or fitness for a particular purpose, that the Pixbee equipment and services provided will detect or avert such incidents or their consequences.

Pixbee does not undertake any risk that you or property, or the person or property of others, may be subject to injury or loss if such an event occurs. The allocation of such risk remains with you, not Pixbee.

Other than the above product warranty for the Pixbee products, its suppliers disclaim all warranties of any kind, whether express, implied, or statutory, regarding the Pixbee services, including any implied warranty of title, merchantability, fitness for a particular purpose, or non-infringement of third-party rights.

Because some jurisdictions do not permit the exclusion of implied warranties, the last sentence of this section may not apply to you.

Pixbee hereby further expressly disclaims all liability for any claims for service failures that are due to normal product wear, product misuse, abuse, product modification, improper product selection or your non-compliance with all applicable federal, state or local laws.

This warranty and warranty disclaimer give you specific legal rights, and you may have other rights that vary by state, province, or country. Other than as permitted by law, Pixbee does not exclude, limit or suspend other rights you have, including those that may arise from the nonconformity of a sales contract.

For a full understanding of your rights, you should consult the laws of your state, province, or country. For our Australian customers: Please note that this warranty is in addition to any statutory rights in Australia in relation to your goods which, pursuant to the Australian Consumer Law, cannot be excluded.

### **6.3 LIMITATIONS OF LIABILITY**

Under no circumstances will Pixbee be liable in any way for any content, including, but not limited to, the loss of content, any errors or omissions in any content, or any loss or damage of any kind incurred in connection with use of or exposure to any content posted, emailed, accessed, transmitted, or otherwise made available via Pixbee.

Pixbee liability for damages, especially for breach of duty or obligation, delay in performance, non-performance, or malperformance shall be precluded, except when these are due to negligent breaches of any significant contractual duty or obligation on the part of Pixbee.

Any liability for negligence is limited to direct losses usually and typically foreseeable in such case. Should the claim for damages be based on wilful or grossly negligent breach of contractual duty or obligation on the part of Pixbee, the preclusion and limitation of liability mentioned in the preceding sentences will not apply. The preceding preclusion and limitation of liability will also not apply to claims for damages arising out of loss of life, bodily injury or health impacts for which Pixbee may be liable, or for non-contractual liability.

Some states and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Additionally, this provision is not intended to limit Pixbee's liability in the event of Pixbee's wilful or intentional misconduct.





Keep Safe, Stay Connected with Pixbee™

## DIRECTED

All Images, Information and Content are Copyright  
© 2025 Directed Electronics Australia Pty Ltd.  
All Rights Reserved.

[www.directed.com.au](http://www.directed.com.au) | [www.directed.co.nz](http://www.directed.co.nz)



[www.pixbee.com.au](http://www.pixbee.com.au) | [www.pixbee.co.nz](http://www.pixbee.co.nz)